



Points for attention

- Do not hit or crush it seriously.
- Do not contact benzene, diluent and other chemicals.
- Do not use near by strong magnetic field or electric field.
- Avoid direct rays or heating appliances.
- Do not disassemble, repair or modify.
- Do not listen at large volume for long periods of time, so as not to injure the hearing.
- Do not clean the speaker with water and don't immerse the speaker in the water. This speaker only has water pray prevention function. If use the speaker not by the right way and cause any quality problems, not support warranty. Kindly note above!. Please clean the speaker with a slightly damp cloth.
- When using cycling, driving a car or motorcycle, Please don't stand in the rain for a long time.
- When using at low voltage, it may cause distortion of sound and please charge it in time.
- Bluetooth is compatible with common smart phones and tablets, but depending on the device or application you use, may not be able to support a particular feature.

Instruction manual

1. Connect the satellite cable to the speaker host.
2. Connect the audio input cable to the audio output device (PC/Ipad/Game Play, etc.).
3. Connect the power cord.
4. Turn on the switch and turn the volume play knob to obtain the volume.

Parameters

- R.M.S.: 10W
- Speaker: 3"x 2
- Controls: Master volume, ON/OFF, Mode
- Mode: Bluetooth, USB, AUX, FM radio
- Frequency response: 80 HZ – 20 kHz,
- SNR: ≥70dB
- Features: Wooden Design
- Color: Brown/Black
- Powered: AC(~230V)
- Accessory: Audio Cable
- Product size: 120*113*200mm
- Maximum Transmitter Power (E.I.R.P) ≤20 dBm
- The range of which the device operates: 2400 MHz–2483,5 MHz

1		Power Switch	Up is on, down is off
2	VOLUME	Volume knob	Turn right to increase volume, turn left to decrease volume
3	M	Mode Key	The speaker is in AUX mode by default. Press briefly to enter USB play mode/ Bluetooth mode/radio mode
4		Previous song	Short press to select the previous song (in Bluetooth/USB mode) In FM mode is previous station
5		Pause/Play	Pause playback (in Bluetooth/USB mode)
		Radio Mode	Hold push to start search for stations
		Mute	AUX mode: short press to mute
6		Next song	Short press to select the next song (Bluetooth/USB mode) In FM mode is Next station
7		Power LED	After power-on, the green light in on In Bluetooth mode 1. Bluetooth is not connected: green light flashes 2. Bluetooth connection succeeded: the green light is on
8		USB interface	Can connect USB flash disk to play USB flash disk



The symbol of a crossed-out wheeled bin placed on electronic or electrical equipment, its packaging or accompanying documents means that the product may not be thrown out together with other waste. Used equipment may contain substances with toxic and carcinogenic properties, hazardous to human health and life, and poisoning the soil and groundwater. It is the user's responsibility to hand over the used equipment to a designated collection point for its proper processing. For more information on recycling of electronic and electrical equipment, please contact your local authorities, waste disposal services and the place where you purchased this product. The household plays an important role in contributing to the reuse and recovery of secondary raw materials, including recycling, waste equipment. At this stage, attitudes are formed that affect the preservation of the common good, which is a clean natural environment.