



# motorola

C1CB+ DIGITAL CORDLESS TELEPHONE



**For: C1001CB+, C1002CB+, C1003CB+ and C1004CB+**

Warning: Charge the handset for 16 hours before use.

## Safety information

### Important

This equipment is not designed to make emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

This product is intended for connection to analogue public switched telephone networks and private switchboards in Europe.

### Important safety instructions

Follow these safety precautions when using your phone to reduce the risk of fire, electric shock, and injury to persons or property:

- Keep all slits and openings of the phone unblocked. Do not set the phone on a heating register or over a radiator. Ensure that proper ventilation is provided at the installation site.
- Do not use while wet or while standing in water.
- Do not use this product near water (for example, near a bath tub, kitchen sink, or swimming pool).
- Do not allow anything to rest on the power cord. Place the power cord so that it will not be walked on.
- Never insert objects of any kind into the product vents as that may result in fire or electric shock.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Do not disassemble this product. If service or repair work is required, contact the customer service helpline found in this user's guide.
- Do not overload wall outlets and extension cords.
- Avoid using during an electrical storm. Use a surge protector to protect the equipment.
- Do not use this phone to report a gas leak, especially if you are in the vicinity of the gas line.

### Important

To reduce the risk of fire, use only the supplied power adaptor.

### Unplug this cordless phone immediately from an outlet if:

- The power cord or plug is damaged or frayed.
- Liquid has been spilled on the product.
- The product has been exposed to rain or water. Do not retrieve the handset or base until after you have unplugged the power and phone from the wall. Then retrieve the unit by the unplugged cords.
- The product has been dropped or the cabinet has been damaged.
- The product exhibits a distinct change in performance.

## **Installation Guidelines**

- Read and understand all instructions and save them for future reference.
- Follow all warnings and instructions marked on the product.
- Do not install this product near a bath tub, sink, or shower.
- Operate this phone using only the power source that is indicated on the marking label. If you are unsure of the power supply to your home, consult with your dealer or local power company.
- Do not place this product on an unstable cart, stand, or table. This product may fall, causing serious damage to the product.
- Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work to restore the product to normal operation.
- Clean this product with a soft, damp cloth. Do not use chemicals or cleaning agents to clean this phone.
- Use only the power supply that came with this unit. Using other power supplies may damage the unit.
- Because this phone operates on electricity, you should have at least one phone in your home that could operate without electricity in the case the power in your home goes out.
- To avoid interference to nearby appliances, do not place the base of the phone on or near a TV, microwave oven, or VCR.

## **Battery Safety Instructions**

- Do not burn, disassemble, mutilate, or puncture the battery. The battery contains toxic materials that could be released, resulting in injury.

### **Important**

There is a risk of explosion if you replace the battery with an incorrect battery type. Use only the batteries that came with your phone or an authorized replacement recommended by the manufacturer.

- Keep batteries out of the reach of children.
- Remove batteries if storing over 30 days.
- Do not dispose of batteries in fire, which could result in explosion.
- The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods.

**Save these instructions**

# Welcome...

## to your new Motorola C1CB+ Digital Cordless Telephone!

- Block calls by call type.<sup>1</sup>
- Block up to 10 numbers.<sup>1</sup>
- Do Not Disturb function.
- 50 names and numbers phonebook.
- Bright backlit display.
- Speakerphone for hands-free conversations.
- Caller ID shows you who is calling and see details of the last 20 callers in a Calls list.<sup>1</sup>
- Make internal calls and transfer external calls between handsets.
- Redial up to 10 of the last numbers called.
- Register up to 4 handsets to a single base.
- All handsets are fully cordless for locating anywhere within range.

Please note that this equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

## Need help?

If you have any problems setting up or using your C1CB+, please contact Customer Services at <https://telcomdis.com/support-motorola-dect>

Alternatively, you may find the answer in the 'Help' section at the back of this guide.

<sup>1</sup>You must subscribe to your network provider's Caller ID or Call Waiting service for these features to work. A subscription fee may be payable.

**This user guide provides you with all the information you need to get the most from your phone.**

**To set up your phone, follow the simple instructions in 'Getting Started', on the next few pages.**

**Important**

Only use the telephone line cord supplied.

**Got everything?**

- C1CB+ base & cordless handset
- 2 x rechargeable Ni-MH battery cells
- Power adaptor for the base
- Telephone line cord
- Quick start guide

**If you have purchased a C1CB+ multiple pack you will also have the following additional items:**

- Cordless handset & charger
- 2 x rechargeable Ni-MH battery cells
- Power adaptor for the charger

**For a better tomorrow**

We make every effort through our design, research, engineering and supply chain management to make better products for everyone, focusing on both social and environmental responsibility.

- Meets and / or exceeds EMEA environmental regulatory requirements.
- Eco friendly packaging with a minimum 20% post consumer recycled content.
- Phone housing is built with a minimum of 25% post consumer recycled content plastic.
- Energy efficient charger that meets EU Code of Conduct requirements.
- ECO mode function which reduces the transmitted power and energy consumption, see page 31.

1.	Getting started .....	8
2.	Getting to know your phone .....	12
3.	Using the phone .....	17
3.1	Switch the handset on / off .....	17
3.2	Calls .....	17
3.2.1	Make a call .....	17
3.2.2	Preparatory dialling .....	17
3.2.3	End a call .....	17
3.2.4	Receive a call .....	17
3.3	Adjust the earpiece volume .....	17
3.4	Mute .....	17
3.5	Intercom .....	18
3.5.1	Make an internal call .....	18
3.5.2	Receive an internal call .....	18
3.5.3	Transfer a call .....	18
3.5.4	3-way conference call .....	18
3.6	Hands-free .....	19
3.6.1	Make a hands-free call .....	19
3.6.2	Answer a call hands-free .....	19
3.6.3	Switch to hands-free during a call .....	19
3.7	Redial .....	19
3.7.1	View or dial an entry .....	19
3.7.2	Copy a Redial list number to the phonebook .....	19
3.7.3	Delete an entry .....	20
3.7.4	Delete the entire Redial list .....	20
3.8	Lock / unlock the keypad .....	20
3.9	Paging / Find handset .....	20
4.	Phonebook .....	21
4.1	Store a name and number .....	21
4.2	View or dial an entry .....	22
4.3	Edit a name and number .....	22
4.4	Delete an entry .....	22
4.5	Delete all entries .....	22
5.	Call block .....	23
5.1	Block by call type .....	23
5.1.1	Block all international calls .....	23
5.1.2	Block all withheld calls .....	23
5.1.3	Block all unavailable calls .....	23
5.1.4	Block all payphone calls .....	23
5.2	Block by number .....	24
5.2.1	Turn block by number on .....	24
5.2.2	View a number in the call block list .....	24
5.2.3	Add a number to the call block list .....	24
5.2.4	Edit a number in the call block list .....	24
5.2.5	Delete a number from the call block list .....	25
5.2.6	Delete the call block list .....	25

6.	Caller ID and the Calls list .....	26
6.1	Caller ID .....	26
6.2	Calls list .....	26
6.2.1	View the Calls list .....	26
6.2.2	Dial a number in the Calls list .....	27
6.2.3	Copy a Calls list number to the phonebook .....	27
6.2.4	Delete an entry .....	27
6.2.5	Delete the entire Calls list .....	27
7.	Clock & alarm .....	28
7.1	Set the date and time .....	28
7.2	Set the alarm .....	28
7.3	Switch off alarm ring .....	28
8.	Personal settings .....	29
8.1	Handset tones .....	29
8.1.1	Handset ringer volume .....	29
8.1.2	Handset ringer melody .....	29
8.1.3	Key beep .....	29
8.2	Handset name .....	30
8.3	Auto answer .....	30
8.4	Language .....	30
8.5	Do Not Disturb .....	30
9.	Base settings .....	31
9.1	ECO mode .....	31
9.2	ECO PLUS .....	31
9.3	Auto Prefix .....	31
9.4	Recall mode .....	32
9.5	Dial mode .....	32
9.6	Change base PIN code .....	32
9.7	Registering an additional handset .....	32
9.8	De-register a handset .....	33
9.9	Restore default settings .....	34
9.10	Default settings .....	34
10.	Help .....	35
11.	General information .....	37

# 1. Getting started

## Location

### Important

Do not place your C1CB+ in the bathroom or other humid areas.



Place your C1CB+ base within reach of the AC power outlet and telephone wall socket. The socket-outlet should be installed near the equipment and should be easily accessible.

Make sure that it is at least one metre away from other electrical appliances to avoid interference. Your C1CB+ works by sending radio signals between the handset and base. The strength of the signal depends on where you place the base. Placing it as high as possible ensures the best signal.

### Handset range

The unit has a range of up to 300 metres outdoors when there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range significantly. With the base indoors and the handset either indoors or outdoors, the range will normally be up to 50 metres. Thick concrete and stone walls can severely affect the range.

### Signal strength

 on your handset indicates that you are within range of the base. When out of range of the base,  flashes. If you are on a call, you will hear a warning beep.

The line will hang up if the handset moves out of range of the base. Move it closer to the base. The handset will automatically reconnect to the base.

 
## Setting up



### Important

The base station must be plugged into the AC power at all times. Do not connect the telephone line cord into the wall socket until the handset is fully charged. Use only the power adaptor and telephone line cord supplied with the product.

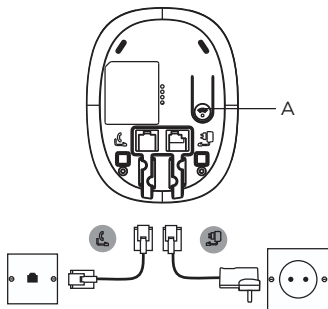 



## Connecting the base



1. Plug the telephone line cord into the socket marked  on the underside of the base.
2. Plug the power adaptor into the socket marked  on the rear of the base and plug the other end into the wall socket. Switch on the power supply.

 
## Installing and charging the handset

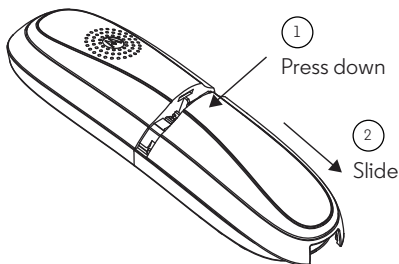



1. Remove the battery cover from the back of the handset and insert the rechargeable Ni-MH battery cells supplied. Please note the '+' and '-' markings inside the battery compartment and insert in the correct direction.
2. Slide the battery cover back into place.
3. If you are charging the batteries for the first time, place the handset on the base to charge for at least 16 hours continuously.
4. When the handset is fully charged,  will appear steadily on the display. Plug the other end of the telephone line cord (make sure that one end is already plugged into the base) into the telephone wall socket.

## Connecting the handset and charger (for multi-pack only)

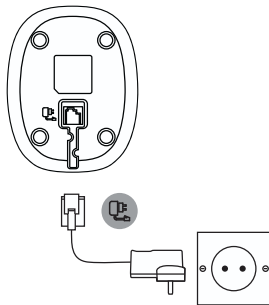If you have purchased a multiple pack, you will need to carry out this process for all the handsets and chargers.




1. Plug the power adaptor into the socket marked  on the underside of the charger and plug the other end into the AC power wall socket.
2. Remove the battery cover from the back of the handset and insert the 2 x AAA Ni-MH rechargeable batteries supplied. Please note the '+' and '-' markings inside the battery compartment and insert in the correct direction.
3. Slide the battery cover back into place.
4. If you are charging the batteries for the first time, place the handset on the charger to charge for at least 16 hours continuously.
5. When the handset is fully charged,  will appear steadily on the display. The display will show **HANDSET** and the handset number (e.g. 2) to indicate that it is registered to the base.

### Important

Warning! Use only the approved rechargeable Ni-MH battery cells (2 x AAA Ni-MH 300mAh rechargeable batteries) supplied with your C1CB+.

### Battery low warning

If  flashes on the display and you hear a warning beep every minute during a call, you will need to recharge the handset before you can use it again.

When charging,  will scroll on the display.

### Battery performance

In ideal conditions, fully charged batteries should give up to 10 hours talk time or up to 200 hours standby time on a single charge.<sup>1</sup>

Note that new batteries do not reach their full capacity until they have been put to normal use for several days.

To keep your batteries in the best condition, leave the handset off the base for a few hours at a time.


Running the batteries right down at least once a week will help them last as long as possible.

The charge capacity of rechargeable batteries will reduce with time as they wear out, giving the handset less talk / standby time. Eventually they will need to be replaced.

After charging your handset for the first time, subsequent charging time is about 6–8 hours a day. Batteries and the handset may become warm during charging. This is normal.

<sup>1</sup>All talk and standby times are approximate and depend on features selected and usage pattern.

 
### **Date and time**

1. Press **MENU**  
**OK**, scroll  to **CLOCK/ALARM** and press **MENU**  
**OK**.
2. The display shows **DATE & TIME**.
3. Press **MENU**  
**OK** to select.
4. Enter the date using the keypad (e.g. 12--08--2023 for 12th of August 2023) and press **MENU**  
**OK** to confirm.
5. Enter the time using the keypad (e.g. 06--30 for 6:30) and press **MENU**  
**OK** to confirm.

**Your C1CB+ is now ready for use.**

## 2. Getting to know your phone

### Overview of your handset

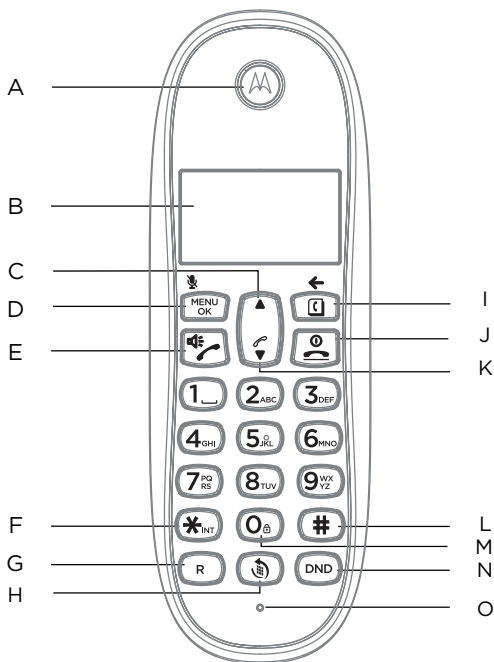

**A Earpiece**

**B Display**

See page 14 for an overview of display icons.

**C Up**

During a call, press to increase the earpiece volume.

When the phone is ringing, press to increase the handset ringer volume.

Press to scroll through the menu options, redial list, calls list and phonebook entries.

**D Menu / OK / Mute**

Press to open the menu.

Press to select menu options and to confirm a displayed option.

During a call, press to turn mute on / off.

**E Talk / Hands-free**

Press to switch hands-free on or off during a call.

Press to make and receive calls.

**F \* / Intercom / Pulse to Tone dialling**

Dial a \*.

Used to make internal calls and transfer calls to other C1CB+ handsets registered to the base.

During a call, press to switch from pulse dialling to tone dialling.

**G Recall**

Use with switchboard / PABX services and some network services.

**H Redial**

In standby mode, press to open the redial list.

**I Phonebook / Delete / Back**

In standby mode, press to open the phonebook menu.

In editing mode, press to delete characters and digits.

Go back to the previous menu level.

**J End Call / Exit / Switch Handset on / off**

Press to end a call.

When viewing the redial / calls list / phonebook or when in the menu, press to exit and return to standby mode.

Press and hold for 5 seconds to switch off the handset and single press to switch on the handset.

**K Call list / Down**

In standby mode, press to open the calls list.

During a call, press to decrease earpiece volume.

When the phone is ringing, press to decrease the handset ringer volume.

Press to scroll through the menu options, redial list, calls list and phonebook entries.

**L Pause / #**

Press and hold to enter a pause (P) when pre-dialling or storing numbers.

Dial a #.

**M Keypad lock**

Press and hold to lock and unlock the keypad.

 
**N Do Not Disturb**

Press to automatically turn on Do Not Disturb.

Press and hold to enter the call block menu.

**O Microphone**

## Handset LCD Display

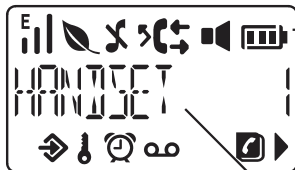

**Battery status**  
Scrolls when charging

**Time or Handset name**

In standby mode, press and hold **MENU** OK to switch handset idle screen between handset name or time.



Signal icon



ECO MODE is on.



ECO PLUS is on.



Handset ringer is off.



Indicates a missed call.



Steady when making an outgoing call.  
Flashes to indicate an incoming or internal call.



Indicates an incoming call when viewing the calls list<sup>1</sup>.



Indicates an outgoing call when viewing the redial list<sup>1</sup>.



Hands-free is on.



Menu is opened.



Keypad is locked.



Alarm is set.



Indicates new voicemail messages received.  
Off when there is no voicemail messages<sup>2</sup>.



Phonebook is opened.



Displayed number is longer than 12 digits.


The approximate power levels of your battery are indicated as follows:



Battery is fully charged.



Battery is partially charged.

 
 Battery is running low.

 Flashes when battery is almost fully discharged.

<sup>1</sup>For this feature to work, you must subscribe to Caller ID Service from your network operator. A subscription fee may be payable.

<sup>2</sup>This feature is dependent on your Network Service provider supporting the service. A subscription fee may be payable.

## Overview of the base

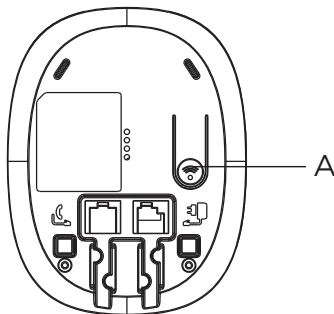

### A Page

In standby mode, press to ring the handset(s).







Press and hold to enter registration mode when registering handsets.

## Navigating the menus

Your C1CB+ has an easy-to-use menu system.

Each menu has a list of options, which you can see on the menu map on the following page.

When the handset is switched on and in standby mode:

1. Press  to open the main menu.
2. Then use  or  buttons to scroll through the available options.
3. Press  to select an option. To return to the previous menu level, press . To exit the menu and return to standby mode, press .

### Note

If no buttons are pressed for 30 seconds, the handset returns to standby mode automatically.

## Menu map

### PHONEBOOK

VIEW  
ADD NEW  
EDIT  
DELETE<sup>1</sup>  
DELETE ALL<sup>1</sup>

### CALL BLOCK

BY CALLTYPE  
BY NUMBER

### CLOCK/ALARM

DATE & TIME  
SET ALARM

### PERSONAL SET

HANDSET TONE  
RING VOLUME  
RING MELODY  
KEY TONE  
HANDSET NAME  
AUTO ANSWER  
LANGUAGE  
DONOTDISTURB

### ADVANCED SET

ECO MODE  
ECO PLUS  
AUTO PREFIX  
RECALL TIME  
DIAL MODE  
CHANGE PIN  
REGISTER  
UNREGISTER  
RESET

<sup>1</sup>Only available if a phonebook entry is stored.



### 3. Using the phone

#### Note


The handset will automatically time the duration of all external calls. The call timer will display after the first 10 seconds of the call. When the call ends, the total duration of the talk time stays on the display for 3 seconds.

#### 3.1 Switch the handset on / off



Press and hold  to switch the handset on or off.

#### 3.2 Calls

##### 3.2.1 Make a call

1. Press .
2. When you hear the dial tone, dial the number.


##### 3.2.2 Preparatory dialling


1. Dial the number first. If you make a mistake, press  to delete the last digit.
2. Press  to dial.

##### 3.2.3 End a call

Press , or place the handset back on the base or charger.

##### 3.2.4 Receive a call



When you receive an external call, the phone rings and  flashes on the display.

1. Press  to answer the call.

#### Note



To answer calls by simply lifting the handset from the base, switch Auto answer on.

#### 3.3 Adjust the earpiece volume

During a call, press  or  to increase or decrease the volume. There are 5 levels to choose from.

#### 3.4 Mute


You can mute your handset so that you can talk to someone nearby without your caller hearing.



1. During a call, press . The display shows **MUTE ON** and your caller cannot hear you.
2. Press  again to resume your call.

## 3.5 Intercom

### 3.5.1 Make an internal call

If you have more than one handset registered to the base, you can make internal calls between two handsets.

 flashes and the handset number that is being called is displayed.

1. If only 2 handsets are registered to the base, press and hold **\*<sub>INT</sub>** and the other handset rings automatically.
2. If more than 2 handsets are registered to the base, press and hold **\*<sub>INT</sub>** and scroll  to the handset that is to be called then press .

### 3.5.2 Receive an internal call




When you receive an internal call,  flashes and the handset number that is calling you is displayed.

Press  to answer the call.

### 3.5.3 Transfer a call

You can transfer an external call to another handset registered to the base.

During an external call:

1. If only 2 handsets are registered to the base, press and hold **\*<sub>INT</sub>** and the other handset rings automatically.
2. If more than 2 handsets are registered to the base, press and hold **\*<sub>INT</sub>** and scroll  to the handset that is to be called. Then press .
3. When the other handset answers, press  to complete the transfer.

#### Note





If there is no answer from the other handset, press and hold **\*<sub>INT</sub>** to return to the external caller.

The external call resumes automatically after 60 seconds if there is no answer.

### 3.5.4 3-way conference call

You can hold a 3-way conference call between 2 internal callers and 1 external caller.





**During a call with an external caller:**

1. If only 2 handsets are registered to the base, press and hold **\*<sub>INT</sub>** and the other handset rings automatically.
2. If more than 2 handset are registered to the base, press and hold **\*<sub>INT</sub>** and scroll  to the handset that is to join the call. Then press .
3. When the other handset answers, press and hold  to connect all three callers to begin the conference call.
4. Press  to end the call.

## 3.6 Hands-free

To talk to the caller without holding the handset and for other people in the room to listen to the conversation over the loudspeaker, simply use the hands-free function.


### 3.6.1 Make a hands-free call

1. Press  twice, then dial the number.  is displayed and the call can be heard over the handset loudspeaker.
2. Press  to switch the call between the earpiece and the loudspeaker.
3. Press  to end the call.



#### Note

During a hands-free call, press  or  to adjust the volume.

### 3.6.2 Answer a call hands-free

When the phone rings, press  twice to answer the call.






### 3.6.3 Switch to hands-free during a call

1. During a call, press  to put the call on the loudspeaker.
2. To switch hands-free off and return the call to the earpiece, press  again.

## 3.7 Redial

The last 10 entries dialled are stored in the redial list.










### 3.7.1 View or dial an entry

1. Press  to open the redial list.
2. Scroll  or  to the entry you want.
3. Press  to dial the displayed entry or press  to return to standby mode.

#### Note








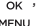

If you have Caller ID and the caller's number exactly matches an entry stored in the phonebook, the name is displayed.

### 3.7.2 Copy a Redial list number to the phonebook




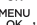
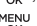

1. Press  to open the redial list.
2. Scroll  or  to the entry you want.
3. Press , the display shows **VIEW**.
4. Scroll  or  to **SAVE NUMBER**.
5. Press . The display shows **ENTER NAME**.
6. Enter the name and press . The number is displayed.
7. Edit the number if necessary, then press . The number is stored.

See 'Entering names' and 'Writing tips' on page 21.

### 3.7.3 Delete an entry

1. Press  to open the redial list.
2. Scroll  or  to the entry you want.
3. Press , the display shows **VIEW**.
4. Scroll  or  to **DELETE**.
5. Press , the display shows **CONFIRM?**.
6. Press  to confirm or  to cancel.

### 3.7.4 Delete the entire Redial list




1. Press  to open the redial list.
2. Press  and scroll  to **DELETE ALL**.
3. Press , the display shows **CONFIRM?**.
4. Press  to confirm or  to cancel.

## 3.8 Lock / unlock the keypad

You can lock the keypad so that it cannot be operated accidentally while carrying it around.



### Note

When the keypad is locked, you can still answer incoming calls and operate the handset as normal during the call. When the call ends, the keypad lock comes on again.

1. Press and hold . **KEYS LOCKED** and  are displayed.
2. Press and hold  again to unlock the keypad.

## 3.9 Paging / Find handset

You can alert a handset user that he/she is wanted or locate a missing handset. Paging calls cannot be answered by a handset.

1. Press  on the underside of the base. All handsets registered to the base will ring.
2. To stop the ringing, press  on the base again or press any button on the handset.

## 4. Phonebook








You can store up to 50 names and numbers in the phonebook. Names can be up to 12 characters long and numbers up to 24 digits.

### 4.1 Store a name and number

If the C1CB+ is connected to a switchboard, you may need to enter a pause in a stored number. This gives the switchboard time to find an outside line. A pause is normally stored after the switchboard access code (e.g. 9). When storing a number, press and hold **#** until the display shows **P**. You can then continue entering the phone number.

If you have subscribed to Caller ID Service and wish to display the name of your caller instead of the number, save the full telephone number including the area code to your phonebook.

You can store multiple entries with the same name. However, to prevent unnecessary duplicated entries, you can only store the number once.

1. Press **MENU** . The display shows **PHONEBOOK**.
2. Press **MENU** , scroll  to **ADD NEW**.
3. Press **MENU** . The display shows **ENTER NAME**.
4. Enter the name and press **MENU** . The display shows **ENTER NUMBER**.
5. Enter the number and press **MENU**  to save. The display shows **ADD NEW**.
6. Enter the next name and number entry that you wish to store in your phonebook or press  to return to standby mode.

#### Entering names

Use the keypad letters to enter names, e.g. to store TOM:

Press **8**<sub>TUV</sub> once to enter T.

Press **6**<sub>MNO</sub> three times to enter O.

Press **6**<sub>MNO</sub> once to enter M.

#### Writing tips

Press  to delete the last character or digit.

Press **▲** or  to move between characters or digits.

Press **1**<sub>\_</sub> to insert a space.

Press **1**<sub>\_</sub> twice to insert a dash.

## 4.2 View or dial an entry

1. Press is displayed.
2. Scroll or to the entry you want.  
OR  
Enter the first letter of the name to search alphabetically.  
The first name that starts with this letter or the nearest letter in the alphabet will be displayed. Scroll or to the entry you want.
3. Press to dial or to return to standby mode.

### Note

When the name is displayed, you can switch between the name and number by pressing and then .

## 4.3 Edit a name and number

1. Press . The display shows **PHONEBOOK**.
2. Press . Scroll to **EDIT** and press .
3. Scroll or to the entry you want to edit, or search alphabetically and press . The existing name is displayed.
4. Press to delete the name if required, then enter the new name and press . The existing number is displayed.
5. Press to delete the number if required, then enter the new number and press , the entry is saved.
6. Press to return to standby mode.

## 4.4 Delete an entry

1. Press . The display shows **PHONEBOOK**.
2. Press . Scroll to **DELETE** and press .
3. Scroll or to the entry you want to delete, or search alphabetically and press . The display shows **CONFIRM?**.
4. Press to confirm or to cancel.

## 4.5 Delete all entries

1. Press . The display shows **PHONEBOOK**.
2. Press . Scroll to **DELETE ALL**.
3. Press . The display shows **CONFIRM?**.
4. Press to confirm or to cancel.





## 5. Call block

Your phone can block calls by call types or by numbers. Up to 10 numbers can be blocked. For this feature to work, you must subscribe to Caller ID Service from your network operator. A subscription fee may be payable. You can access the call block menu by pressing and holding **DND** in standby mode or through the handset menu.






### 5.1 Block by call type

Your phone can block calls by 4 different call types, international, withheld, unavailable or payphone calls.






#### 5.1.1 Block all international calls

1. Press MENU  
OK, scroll  to **CALL BLOCK**.
2. Press MENU  
OK. The display shows **BY CALLTYPE**.
3. Press MENU  
OK. The display shows **INTERN'L**, press MENU  
OK.
4. Press  or  to select **ON** or **OFF**.
5. Press MENU  
OK to confirm or  to return to the previous menu.






#### 5.1.2 Block all withheld calls

1. Press MENU  
OK, scroll  to **CALL BLOCK**.
2. Press MENU  
OK. The display shows **BY CALLTYPE**.
3. Press MENU  
OK, scroll  to **WITHHELD**, press MENU  
OK.
4. Press  or  to select **ON** or **OFF**.
5. Press MENU  
OK to confirm or  to return to the previous menu.

#### 5.1.3 Block all unavailable calls

1. Press MENU  
OK, scroll  to **CALL BLOCK**.
2. Press MENU  
OK. The display shows **BY CALLTYPE**.
3. Press MENU  
OK, scroll  to **UNAVAILABLE**, press MENU  
OK.
4. Press  or  to select **ON** or **OFF**.
5. Press MENU  
OK to confirm or  to return to the previous menu.











#### 5.1.4 Block all payphone calls

1. Press MENU  
OK, scroll  to **CALL BLOCK**.
2. Press MENU  
OK. The display shows **BY CALLTYPE**.
3. Press MENU  
OK, scroll  to **PAYPHONE**, press MENU  
OK.
4. Press  or  to select **ON** or **OFF**.
5. Press MENU  
OK to confirm or  to return to the previous menu.












## 5.2 Block by number

Your phone can block calls by numbers, you can store a full phone number or an area code.










### 5.2.1 Turn block by number on

1. Press , scroll  to **CALL BLOCK**.
2. Press , scroll  to **BY NUMBER**.
3. Press . The display shows **BLOCK MODE**, press .
4. Press  or  to select **ON** or **OFF**.
5. Press  to confirm or  to return to the previous menu.













### 5.2.2 View a number in the call block list

1. Press , scroll  to **CALL BLOCK**.
2. Press , scroll  to **BY NUMBER**.
3. Press , scroll  to **VIEW**.
4. Press , scroll  or  to the entry you want to view.
5. Press  to view or  to return to the previous menu.

### 5.2.3 Add a number to the call block list













1. Press , scroll  to **CALL BLOCK**.
2. Press , scroll  to **BY NUMBER**.
3. Press , scroll  to **ADD NEW**, press .
4. Enter the number and press  to save. The display shows **ADD NEW**.
5. Enter the next number you wish to block or press  to return to standby mode.

### 5.2.4 Edit a number in the call block list








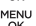

1. Press , scroll  to **CALL BLOCK**.
2. Press , scroll  to **BY NUMBER**.
3. Press , scroll  to **EDIT**.
4. Press , scroll  or  to the entry you want to edit and press .
5. Press  to delete the number if required.
6. Enter the new number and press , the entry is saved.



### 5.2.5 Delete a number from the call block list

1. Press , scroll  to **CALL BLOCK**.
2. Press , scroll  to **BY NUMBER**.
3. Press , scroll  to **DELETE**.
4. Press , scroll  or  to the entry you want to delete.
5. Press . The display shows **CONFIRM?**.
6. Press  to confirm or  to cancel.

### 5.2.6 Delete the call block list

1. Press , scroll  to **CALL BLOCK**.
2. Press , scroll  to **BY NUMBER**.
3. Press , scroll  to **DELETE ALL**.
4. Press . The display shows **CONFIRM?**.
5. Press  to confirm or  to cancel.

## 6. Caller ID and the Calls list

### Important

To use Caller ID, you must first subscribe to the service from your network provider. A subscription fee may be payable.

To ensure that the caller's name is displayed, make sure you have stored the full telephone number, including the area code in the phonebook.

If the number is unavailable, **UNAVAILABLE** will be displayed.

If the call is from an international number, **INTERN'L** will be displayed.

If the call is from the operator, **OPERATOR** will be displayed.

If the call is from a payphone, **PAYPHONE** will be displayed.

If the call is from a ringback request, **RINGBACK** will be displayed.

### 6.1 Caller ID

If subscribed to Caller ID, the caller's number will be displayed (provided it is not withheld) prior to answering the call. The display can show the last 12 digits or characters of the phone numbers and names.









If the caller's name and number are stored in the phonebook and a number match is found, the caller's name will be displayed instead.

### 6.2 Calls list





The Calls list stores details of the last 20 received calls, including the phone number and date and time of the call.

The caller's details are stored in the Calls list whether or not the call has been answered. When the list is full, and a new call is received, the oldest entry will be deleted automatically.









#### 6.2.1 View the Calls list

1. Press  to open the Calls list. If there are no calls in the list, the display shows **LIST EMPTY**.
2. Press  or  to scroll through the list.
  - If the call was answered,  is displayed as you scroll to the entry. If the call was unanswered,  is displayed as you scroll to the entry. When you reach the end of the list, the display will show -----.
  - If the caller's number exactly matches an entry stored in the phonebook, the display will show the name. Keep pressing  to see the date and time of the call and the caller's number.
  - If the telephone number is longer than 12 digits,  is displayed. Press  to see the remaining digits.









### 6.2.2 Dial a number in the Calls list

1. Press  to open the Calls list.
2. Scroll  or  to the entry you want.
3. Press  to dial the displayed entry.







### 6.2.3 Copy a Calls list number to the phonebook

1. Press  to open the Calls list.
  2. Scroll  or  to the entry you want.
  3. Press  and scroll  to **SAVE NUMBER**.
  4. Press  again. The display shows **ENTER NAME**.
  5. Enter the name and press . The number is displayed.
  6. Edit the number if necessary, then press  to confirm.
- See 'Entering names' and 'Writing tips' on page 21.

### 6.2.4 Delete an entry


1. Press  to open the Calls list.
2. Scroll  or  to the entry you want and press .
3. Scroll  to **DELETE**.
4. Press . The display shows **CONFIRM?**.
5. Press  to confirm or  to cancel.

### 6.2.5 Delete the entire Calls list

1. Press  to open the Calls list.
2. Press , scroll  to **DELETE ALL**.
3. Press . The display shows **CONFIRM?**.
4. Press  to confirm or  to cancel.





## 7. Clock & alarm

### 7.1 Set the date and time

1. Press <sup>MENU</sup><sub>OK</sub>, scroll  to **CLOCK/ALARM**.
2. Press <sup>MENU</sup><sub>OK</sub>. The display shows **DATE & TIME**.
3. Press <sup>MENU</sup><sub>OK</sub> to select.
4. Enter the date (e.g. 12--08--2023 for 12th of August 2023) and press <sup>MENU</sup><sub>OK</sub> to confirm.
5. Enter the time using the keypad (e.g. 06--30 for 6:30) and press <sup>MENU</sup><sub>OK</sub> to confirm.

### 7.2 Set the alarm


Each handset can have a different alarm setting.

1. Press <sup>MENU</sup><sub>OK</sub>, scroll  to **CLOCK/ALARM**.
2. Press <sup>MENU</sup><sub>OK</sub>, scroll  to **SET ALARM** and press <sup>MENU</sup><sub>OK</sub>.
3. Press  or  to select **ON** or **OFF** and press <sup>MENU</sup><sub>OK</sub> to confirm.
4. If you select **ON**, enter the time using the keypad (e.g. 07--30 for 7:30) and press <sup>MENU</sup><sub>OK</sub> to confirm.

### 7.3 Switch off alarm ring

When the alarm sounds, press any button to stop the ringing.

#### Note










Once the alarm is set to on,  is displayed. When the alarm is ringing,  flashes.

## 8 Personal settings



### 8.1 Handset tones

#### 8.1.1 Handset ringer volume

The handset ring volume can be set to different volume levels. Choose from 5 volume levels or **Off**.

1. Press , scroll  to **PERSONAL SET**.
2. Press . The display shows **HANDSET TONE**.
3. Press . The display shows **RING VOLUME**, press .
4. Press  or  to select the volume (1 -5 or **OFF**).
5. Press  to confirm or  to return to the previous menu.











#### Note

When the phone is ringing, you can adjust the ringer volume by pressing  or .

#### 8.1.2 Handset ringer melody











You can set different ringer melodies for your calls. Choose from 5 different ringer melodies.

You will hear a sample ring as you scroll to each ring melody.

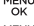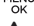1. Press , scroll  to **PERSONAL SET**.
2. Press . The display shows **HANDSET TONE**.
3. Press , scroll  to **RING MELODY** and press .
4. Press  or  to select the ringer melody (1 - 5).
5. Press  to confirm or  to return to the previous menu.



#### 8.1.3 Key beep


When you press a button on the handset keypad, you will hear a beep. You can switch these beeps on or off.

1. Press , scroll  to **PERSONAL SET**.
2. Press . The display shows **HANDSET TONE**.
3. Press , scroll  to **KEY TONE** and press .
4. Press  or  to select **ON** or **OFF**.
5. Press  to confirm or  to return to the previous menu.

## 8.2 Handset name


If you are using more than one handset with your CTCB+ base, you can set a personalized name for each handset to easily distinguish between them. A name can be up to 10 characters long.






1. Press **MENU** <sup>OK</sup>, scroll  to **PERSONAL SET**.
2. Press **MENU** <sup>OK</sup>, scroll  to **HANDSET NAME** and press **MENU** <sup>OK</sup>.
3. Enter the new handset name and press **MENU** <sup>OK</sup> to confirm.

Delete the current name by pressing .



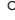


See 'Entering names' and 'Writing tips' on page 21.

## 8.3 Auto answer

Your phone is set to answer calls by lifting the handset off the base or charger. You can switch this feature off so that calls can only be answered by pressing .






1. Press **MENU** <sup>OK</sup>, scroll  to **PERSONAL SET**.
2. Press **MENU** <sup>OK</sup>, scroll  to **AUTO ANSWER** and press **MENU** <sup>OK</sup>.
3. Press  or  to select **ON** or **OFF**.
4. Press **MENU** <sup>OK</sup> to confirm or  to return to the previous menu.

## 8.4 Language

1. Press **MENU** <sup>OK</sup>, scroll  to **PERSONAL SET**.
2. Press **MENU** <sup>OK</sup>, scroll  to **LANGUAGE** and press **MENU** <sup>OK</sup>.
3. Press  or  to select your preferred language.
4. Press **MENU** <sup>OK</sup> to confirm or  to return to the previous menu.

## 8.5 Do Not Disturb

Your phone can be set so that when you receive an incoming call the phone does not light up or ring. You can turn this feature on / off by pressing **DND** on the handset or in the menu.

1. Press **MENU** <sup>OK</sup>, scroll  to **PERSONAL SET**.
2. Press **MENU** <sup>OK</sup>, scroll  to **DONOTDISTURB** and press **MENU** <sup>OK</sup>.
3. Press  or  to select **ON** or **OFF**.
4. Press **MENU** <sup>OK</sup> to confirm or  to return to the previous menu.

### Note










When Do Not Disturb is switched on, **DONOTDISTURB** shows on the screen of all handsets registered to the base.

## 9. Base settings

### 9.1 ECO mode

Your C1CB+ offers ECO mode function which reduces the transmitted power and energy consumption when switched on.

To switch Eco mode on:

1. Press , scroll  to **ADVANCED SET**.
2. Press , scroll  to **ECO MODE** and press .
3. Press  or  to select **ON** or **OFF**.
4. Press  to confirm or  to return to the previous menu.










#### Note

When ECO mode is set to **ON**, the handset range will be reduced.

### 9.2 ECO PLUS









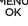


When ECO PLUS is activated and the unit has been idle for 1 minute, the transmitted power between the handset and the base will stop. An incoming call or pressing any key will activate the unit and it will revert back to the normal mode, until it has been idle again for 1 minute. This feature is set to **OFF** by default.

To switch ECO PLUS on:

1. Press , scroll  to **ADVANCED SET**.
2. Press , scroll  to **ECO PLUS** and press .
3. Press  or  to select **ON** or **OFF**.
4. Press  to confirm or  to return to the previous menu.

### 9.3 Auto Prefix

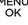


You can set the phone to detect a dialling number and replace it with another number. The number to be detected can be up to 5 digits long. It can be replaced with a number up to 10 digits long.

1. Press , scroll  to **ADVANCED SET**.
2. Press , scroll  to **AUTO PREFIX**.
3. Press . **DIGIT DETECT** is displayed.
4. Press . Enter the number you want to be detected.
5. Press , scroll  to **PREFIX**.
6. Press . Enter the number you want it replaced with.
7. Press  to confirm or  to return to standby mode.

## 9.4 Recall mode




This setting is useful to access certain network and PABX/switchboard services.

The default recall time is suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.

1. Press **MENU** **OK**, scroll  to **ADVANCED SET**.
2. Press **MENU** **OK**, scroll  to **RECALL TIME** and press **MENU** **OK**.
3. Press **▲** or  to select **SHORT**, **MEDIUM** or **LONG** and press **MENU** **OK** to confirm.

## 9.5 Dial mode



Your C1CB+ is set to tone dialling. You should only need to change this if connected to an older type of switchboard / PBX which requires pulse dialling.

1. Press **MENU** **OK**, scroll  to **ADVANCED SET**.
2. Press **MENU** **OK**, scroll  to **DIAL MODE** and press **MENU** **OK**.
3. Press **▲** or  to select **TONE** or **PULSE** and press **MENU** **OK** to confirm.

## 9.6 Change base PIN code

Some functions are protected by a 4 digit PIN code which must be entered if you want to change the settings. The default PIN is 0000. You can change this to your own preferred number.

When you enter a PIN, the digits are shown as \*\*\*\*.

1. Press **MENU** **OK**, scroll  to **ADVANCED SET**.
2. Press **MENU** **OK**, scroll  to **CHANGE PIN**.
3. Press **MENU** **OK**. The display shows **NEW -- -- --**, enter the new 4 digit PIN code.
4. Press **MENU** **OK**. The display shows **CONFIRM**.
5. Re-enter the new PIN and press **MENU** **OK** to confirm.

### Important

If you change the PIN code, keep a record of the new number.

## 9.7 Registering an additional handset

You can register up to 4 handsets to your C1CB+ base to extend your phone system without having to install extension sockets for each new phone.

If you have purchased a C1CB+ multiple pack, all additional handsets come pre-registered to the base.


If you have purchased an additional handset separately, you must register it to your C1CB+ base before it can be used.

### Note









Handset batteries must be fully charged before you start to register. Hold your handset close to the base during the registration process. Handsets that were supplied with your C1CB+ base are already pre-registered.



### On the base:

Press and hold  for 5 seconds. The base will remain in registration mode for 90 seconds.

### On the handset:

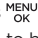1. If the handset is not registered to a base, press  and then enter the 4 digit PIN code (default = 0000) and press .
2. If the handset is already registered to a base, press , scroll  to **ADVANCED SET** and press .
3. Scroll  to **REGISTER** and press .
4. The display will ask for the PIN to be entered. Enter the 4 digit PIN code (default = 0000) and press . You will hear a beep if the registration is successful. The handset is automatically assigned an available handset number. Use this number when making internal calls.





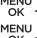




### Note

If registration is not successful the first time, repeat the process again in case the base registration period ran out of time. If the base is not found after a few seconds, the handset returns to standby mode. Try registering again.

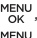If there are already 4 handsets registered to the base, the registration will fail. You must de-register another handset before you can register a new one.

## 9.8 De-register a handset

Use one handset to de-register another. You cannot de-register the handset that you are using.

1. Press , scroll  to **ADVANCED SET**.
2. Press , scroll  to **UNREGISTER**.
3. Press . Enter the 4 digit PIN code (default = 0000).
4. Press , scroll  or  to select the handset number that you want to de-register.
5. Press . You will hear a confirmation beep and the display will return to the previous menu.




## 9.9 Restore default settings

You can restore your C1CB+ to its default (original) settings.

All the handsets that are registered to the base will be retained.

### Important

Resetting your phone to its default settings will delete all entries in the Calls and Redial lists. Entries stored in the phonebook will be retained. Other handsets registered to the base will only return to the default time.

1. Press **MENU**  
**OK**, scroll  to **ADVANCED SET**.
2. Press **MENU**  
**OK**, scroll  to **RESET**.
3. Press **MENU**  
**OK**. The display shows **RESET ?**.
4. Press **MENU**  
**OK** to confirm or  to return to the previous menu. Your C1CB+ will restart automatically.

### Note

Once reset the handset will prompt you to reset the date and time, see page 28.

## 9.10 Default settings


Key tone	ON
Auto answer	OFF
Ringer melody	1
Ringer volume	3
Ear volume	2
Hands-free volume	2
Phonebook	Unchanged
Calls list	Empty
Redial list	Empty
PIN code	0000
Dial mode	Tone
Eco mode	OFF
Keypad lock	OFF

## 10. Help

### No dial tone

- Use only the telephone line cord supplied.
- Make sure that the telephone line cord is connected properly.
- Make sure that the power plug is connected properly and switched on.

### No display

- Make sure that the batteries are inserted correctly and fully charged. Use only approved rechargeable batteries supplied.
- Make sure that the handset is switched on. Press and hold .
- Reset the base by removing the batteries and disconnecting the power supply. Wait for around 15 seconds before connecting it again. Allow up to 1 minute for the handset and base to synchronize.


### !flashes

- The handset is out of range. Move it closer to the base.
- Make sure that the handset is registered to the base.
- Make sure that the power plug is connected properly and switched on.

### Keypad does not seem to work

- Make sure that the keypad lock is not on.

### is not scrolling during charge

- Adjust the handset slightly on the base.
- Clean the charging contacts with a cloth moistened with alcohol.
- Make sure that the power plug is connected properly and switched on.
- The battery is full. When the handset is fully charged,  will appear steadily on the display.

### No Caller ID

- Check your subscription with your network operator.
- The caller may have withheld their number.
- The record cannot be found in your phonebook. Make sure that you have the correct name / number stored in your phonebook, with the full area code.

### Cannot register a handset to the base

- You can register up to a maximum of 4 handsets to a C1CB+ base. You must de-register a handset in order to register a new one.
- Make sure that you have entered the correct PIN code (default = 0000).
- Make sure that you are at least one metre away from other electrical equipment to avoid interference when registering the handset.

## **Handset does not ring**

- The handset ringer volume may be set to **Off**.

## **Noise interference on my phone or on other electrical equipment nearby**

- Place your C1CB+ at least one metre away from electrical appliances or any metal obstructions to avoid any risk of interference.

## 11. General information

### Cleaning

- Clean the handset and base (or charger) with a damp (not wet) cloth, or an anti-static wipe.
- Never use household polish as this will damage the product. Never use a dry cloth as this may cause static shock.

### Environmental

- Do not expose to direct sunlight.
- The handset may become warm when the batteries are being charged or during prolonged periods of use. This is normal. However, we recommend that to avoid damage, do not place the product on antique / veneered wood.
- Do not place your product on carpets or other surfaces which generate fibres, or place it in locations preventing the free flow of air over its surfaces.
- Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as bathrooms.
- Do not expose your product to fire, explosives or other hazardous conditions.
- There is a slight chance that your phone could be damaged by an electrical storm. We recommend that you unplug the power and telephone line cord during an electrical storm.

### Product disposal instructions

#### Product disposal instructions for residential users

When you have no further use for it, please remove any batteries and dispose of them and the product according to your local authority's recycling processes. For more information, please contact your local authority or the retailer where the product was purchased.



#### Product disposal instructions for business users

Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal.



### Consumer Products and Accessories Warranty

Thank you for purchasing this Motorola branded product manufactured under license by Meizhou Guo Wei Electronics Co. Ltd., AD1 section, Economic Development Area, Dongsheng Industrial District, Meizhou, Guangdong, China. ("MZGW")

#### What Does this Warranty Cover?

Subject to the exclusions contained below, MZGW warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Limited Warranty is your exclusive warranty and is not transferable.

### Who is covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

### What will MZGW do?

MZGW or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that do not conform to this limited warranty. We may use functionally equivalent reconditioned / refurbished / pre-owned or new Products, Accessories or parts.

### What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR MZGW BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
<b>Consumer Products</b>	<b>Two (2) years</b> from the date of the products original purchase by the first consumer purchaser of the product.
<b>Consumer Accessories (battery, power supply(s) and line cords)</b>	<b>Ninety (90) days</b> from the date of the accessories original purchase by the first consumer purchaser of the product.
<b>Consumer Products and Accessories that are Repaired or Replaced</b>	<b>The balance of the original warranty or for ninety (90) days</b> from the date returned to the consumer, whichever is longer.

## Exclusions

**Normal Wear and Tear.** Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

**Batteries.** Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

**Abuse & Misuse.** Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola or MZGW are excluded from coverage.

**Use of Non-Motorola branded Products and Accessories.** Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

**Unauthorized Service or Modification.** Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, MZGW or its authorized service centers, are excluded from coverage.

**Altered Products.** Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

**Communication Services.** Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

### How to Obtain Warranty Service or Other Information?

To obtain service or information, please visit:

<https://telcomdis.com/support-motorola-dect>

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a MZGW Authorized Repair Center.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

## Technical Information

### How many telephones can I have?

All items of telephone equipment have a Ringer Equivalence Number (REN), which is used to calculate the number of items which may be connected to any one telephone line. Your CTCB+ has a REN of 1. A total REN of 4 is allowed. If the total REN of 4 is exceeded, the telephones may not ring. With different telephone types, there is no guarantee of ringing, even when the REN is less than 4.

Any additional handsets and chargers that you register have a REN of 0.

The product operates in the frequency range of 1880 to 1900MHz, and the RF transmission power is 250mW (Max.)

### RE Directive

The equipment complies with the essential requirements for the Radio Equipment Directive 2014/53/EU.

### Connecting to a switchboard

This product is intended for use within Europe for connection to the public telephone network.



<This page has been intentionally left blank>

<This page has been intentionally left blank>



## EU Declaration of Conformity

**Manufacturer:**      **Name:**                      Meizhou Guo Wei Electronics Co., Ltd.  
                                 **Address:**                      AD1 Section, The Economy Development Area, Dongsheng  
                                                      Industrial District, Meizhou, 514000.  
                                                      Guangdong Province, P.R. China

**Equipment:**      **Model Number:**      Motorola C1001CB+, Motorola C1002CB+,  
                                                      Motorola C1003CB+, Motorola C1004CB+

**Product Type:**                      DECT cordless phone without Telephone Answering  
                                                      Machine (C100xCB+) and their Multi-handset version.

**Accessories:**                      External Power Supply Unit(s)

We, Meizhou Guo Wei Electronics Co., Ltd, declare under our sole responsibility that the above referenced product complies with the following:

**Directives:**                      **Radio Equipment:**      2014/53/EU  
                                 **RoHS:**                      2011/65/EU and amendment (EU) 2015/863

The following standards/regulations have been applied:

### Radio Equipment Directive (Annex IV)

**Article 3.1a: Safety & Health:**                      EN IEC 62368-1:2020+A11:2020,  
                                                      EN 62479:2010, EN 50663:2017

**Article 3.1b: EMC:**                      EN 301 489-1 v2.2.3, EN 301 489-6 v2.2.1

**Article 3.2: RF Spectrum Efficiency:**      EN 301 406 v2.2.2

**ROHS Directive:**                      EN IEC 63000:2018

**Ecodesign Requirement:** External Power Supply Unit: (EU) 2019/1782

Signed for and on behalf of Meizhou Guo Wei Electronics Co., Ltd

**Place:**                      Shenzhen, P.R. China  
**Name:**                      Raymond Leung  
**Function/Title:**                      Chief Technical Officer  
**Signature:**

**Date:** 29th December, 2022

Imported and distributed by  
Telcomdis Tecnologia S.L.U.

Manufactured, distributed or sold by Meizhou Guo Wei Electronics Co. LTD., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners. © 2023 Motorola Mobility LLC. All rights reserved.

Version 3 (EN\_EU\_TT)

