



## **eclipse HG10**

WIRELESS GAMING HEADSET

Introduction Manual

## Contents


English.....	1
繁體中文.....	
簡體中文.....	
Français.....	
Español.....	
日本語.....	
Deutsch.....	
русский.....	
한국인.....	
ي عربي.....	

Scan the QR code or check out HYTE eclipse HG10's page on HYTE.com.




## Contents

- HYTE eclipse HG10 wireless gaming headset
- Detachable Microphone
- 2.4 GHz Wireless USB Adapter
- USB Type-A to Type-C Charging Cable
- Product Information Manual

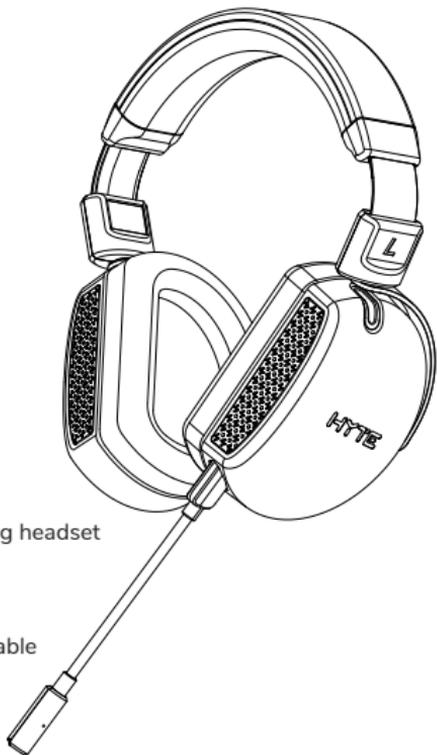

## Device Layout

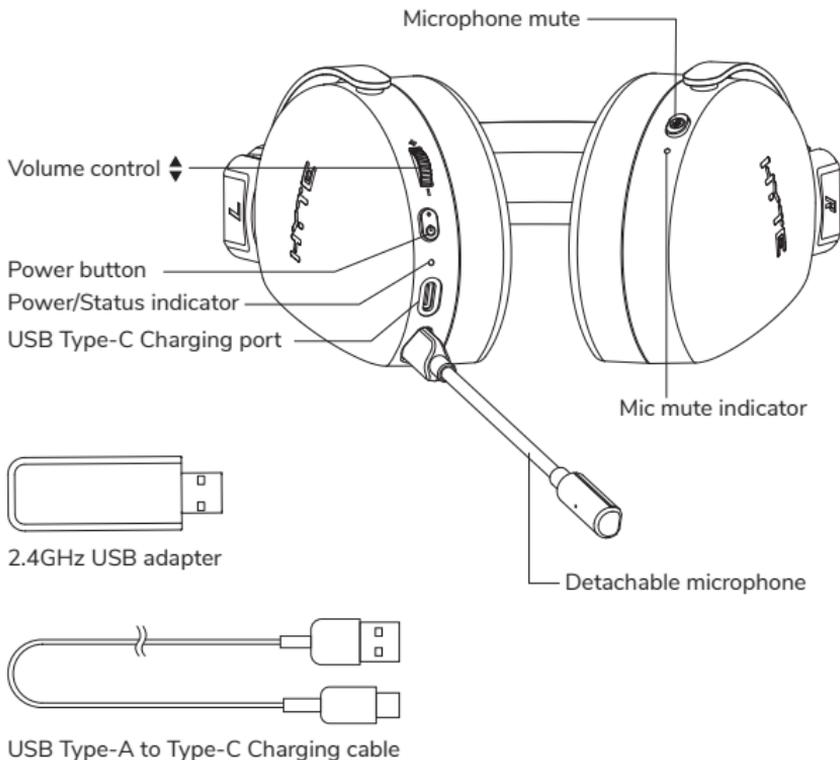

## Connecting your computer

1. Plug the 2.4 GHz USB adapter to your computer.
2. Right-click on the sound icon on the system tray, and then select Sounds.
3. On the playback tab, select (HYTE HG10) from the list, and then set it as the Default Device.
4. In the Recording tab, select (HYTE HG10) from the list and click the Set Default button.

## Connecting to your headset

- Power on your headset by holding the power button for at least 2 seconds.
- Wait until the power/status indicator is solid white.

## Using the volume control

- Rotate the volume control switch to increase or decrease the volume.

## Mute Microphone

- Press the mute microphone button to mute the microphone. The status indicator will be solid red when muted. Press the mute button again to unmute.

## Safety Guidelines

- If your device is not functioning properly and troubleshooting does not work, unplug the device and contact the HYTE Service Center for assistance. DO NOT attempt to service or fix the device yourself.
- DO NOT disassemble the device as doing so will void its warranty.
- Keep the device away from liquid, humidity or moisture. Operate the device only within the temperature range of 0° C (32° F) to 40° C (104° F).  
When the device exceeds the maximum temperature, unplug or switch off the device to let it cool down.

## Proper disposal

Batteries, electronic waste, and electrical equipment should not be disposed of with household waste. Whenever possible, they should be separated and brought to an appropriate collection point to enable recycling and avoid potential impacts on the environment and human health. For more information, contact your local authorities on how to properly recycle or dispose of your device. 

## Battery care

Improperly replaced batteries may present a risk of leak or explosion and personal injury. Risk of fire or explosion if the battery is replaced by an incorrect type. Mistreated rechargeable batteries may present risk of fire or chemical burn. Do not disassemble or expose to conducting materials, moisture, liquid, or heat above 40°C (104°F). A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas. Do not use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal. Do not leave your battery discharged or unused for extended periods. Do not short circuit. Your device may contain an internal, rechargeable battery that is not replaceable. Battery life varies with usage. Non-operational batteries should be discarded according to local laws. If no laws or regulations govern, dispose of your device in a waste bin for electronics. Keep batteries away from children.

# Thank You!

You are now officially a member of the HYTE community.

**Initiation begins here.**





[www.HYTE.com](http://www.HYTE.com)