



Keychron

K2 Max Wireless Mechanical Keyboard

Fully Assembled Version

Keyboard

1x Fully Assembled Keyboard

Including

1x Case

1x PCB

1x Steel Plate

1x Sound Absorbing Foam

1x IXPE Foam

1x PET Film

1x EPDM Foam


1x Bottom Case PET Film

1x Silicone Bottom Pad

4 Sets x Stabilizers

1 Set x Keycaps (PBT Double-shot)

1 Set x Switches

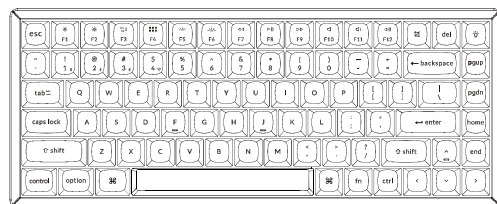

Cable

1x Type-A to Type-C Cable

Receiver

1x Type-A 2.4GHz Receiver


1x Extension Adapter For Receiver

Tools

1x Keycap & Switch Puller


1x Screwdriver

1x Hex Key(Aluminum-Frame Version only)*

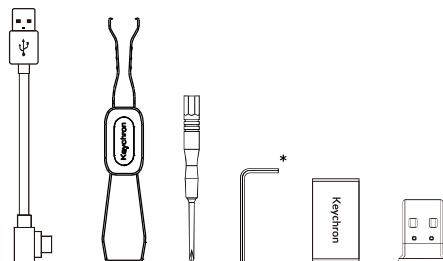

Barebone Version


- Keyboard Kit**
1x Keyboard Kit (Without Keycaps & Switches)
Including
1x Case
1x PCB
1x Steel Plate
1x Sound Absorbing Foam
1x IXPE Foam
1x PET Film
1x EPDM Foam
1x Bottom Case PET Film
1x Silicone Bottom Pad
4 Sets x Stabilizers

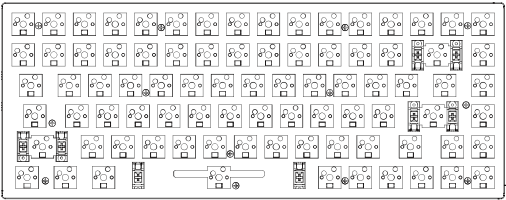

- Cable**
1x Type-A to Type-C Cable


- Receiver**
1x Type-A 2.4GHz Receiver
1x Extension Adapter For Receiver

- Tools**
1x Keycap & Switch Puller
1x Screwdriver
1x Hex Key(Aluminum-Frame Version only)*



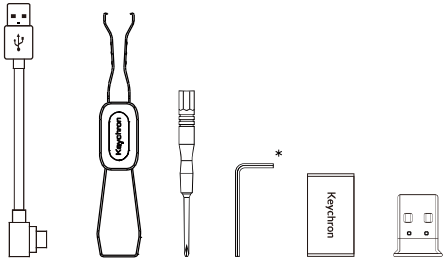


QUICK START GUIDE



If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.

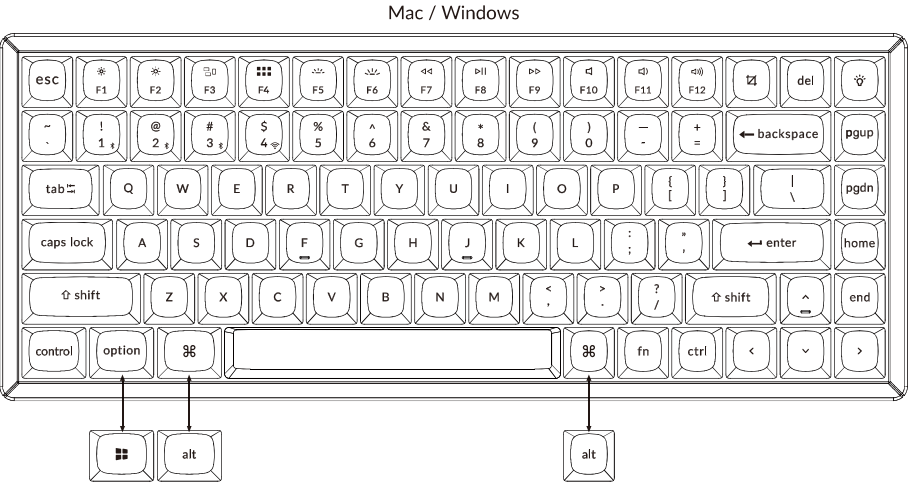


1 Connect 2.4GHz Receiver

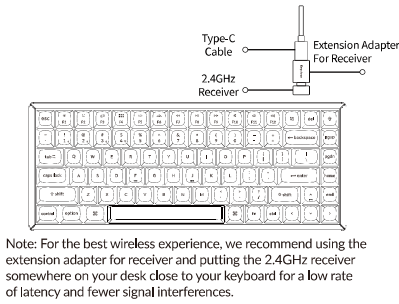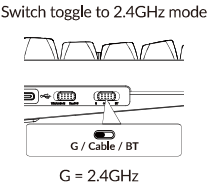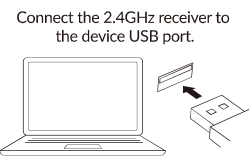

2 Connect Bluetooth

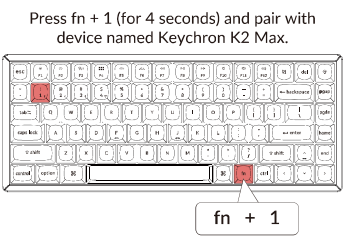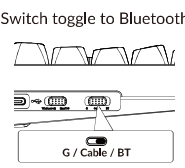


3 Connect Cable

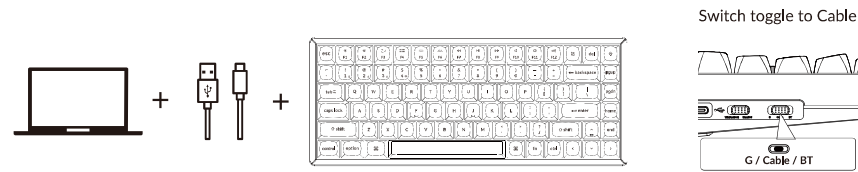


4 Switch To The Right System

Please make sure the system toggle on the top left corner has been switched to the same system as your computer's operating system.




5 The Backlight

Press fn + Q to change the lighting effect

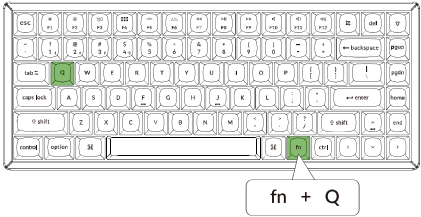

Press fn + tab to turn the backlight on/off

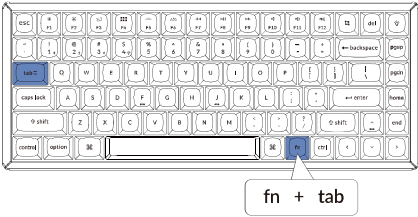


6 Adjust The Backlight Brightness

Press fn + W to increase the backlight brightness




Press fn + S to decrease the backlight brightness

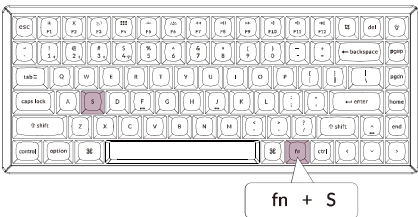


7 Adjust The Backlight Speed

Press fn + T to increase the light effect speed

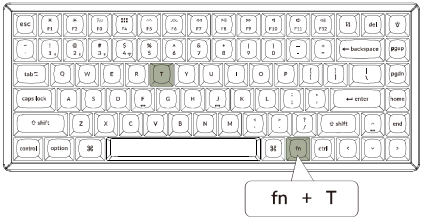

Press fn + G to decrease the light effect speed

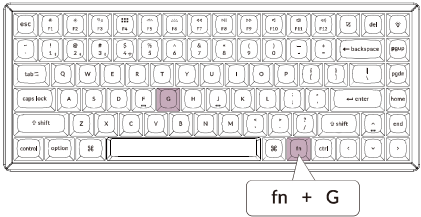

8 The Keychron Launcher App

Please visit launcher.keychron.com to access the Keychron online launcher app. This app enables users to remap keys, adjust key actuation points, assign multiple commands to a single key, enter game controller mode, and more.
If it cannot recognize your keyboard, please reach our support to get instruction.





*The online launcher App can only run on the latest version of Chrome, Edge, and Opera browsers yet.
*The online launcher App only works when the keyboard is connected by wire to the computer.

9 The Layers


There are four layers of key settings on the keyboard. The layer 0 and layer 1 are for the Mac system. The layer 2 and layer 3 are for the Windows system.

If your system toggle is switched to Mac, then the layer 0 will be activated.

If your system toggle is switched to Windows, then the layer 2 will be activated. Remember that if you are using it in Windows mode, please make changes to the layer 2 instead of the top layer (the layer 0). This is a common mistake people are making.



10 Factory Reset & Firmware Update

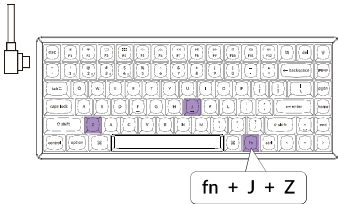

Troubleshooting? Don't know what's going on with the keyboard?

Factory reset your keyboard

- 1. Power on your keyboard.
- 2. Press and hold fn + J + Z (for 4 seconds). The keyboard backlight will flash in red quickly for 3 seconds, indicating that the keyboard has been reset.

Flash your keyboard firmware

- 1. Visit launcher.keychron.com to open the online Launcher web app.
 - 2. Ensure the keyboard is in Cable or Wired mode and plug in the power cable.
 - 3. Find the 'Firmware Update' tab on the left side of the Launcher and connect your keyboard with it.
 - 4. Follow the instructions on the Launcher and complete the firmware update.
- *Step-by-step guide, search the keyword "firmware" on keychron.com.

11 Warranty

The keyboard is highly customizable and easy to be rebuilt. If anything goes wrong with any of the keyboard components of keyboard during the warranty period, we will only replace the defective parts of the keyboard, not the whole keyboard.




K2 MAX WIRELESS MECHANICAL KEYBOARD SPECIFICATIONS

Number of keys: 84
Switch type: Mechanical
Battery: 4000mAh
Charging time: Around 5 hours
Charging port: Type-C
Mode: Bluetooth / Wired / 2.4GHz
Bluetooth operating distance: Within 10 meters (open space)
Name of Bluetooth device: Keychron K2 Max

LED STATUS OVERVIEW


LED Location	Function	Status
Power Indicator	Charging	Low Power - Red Light Blinking Charging - Static Red Full charged - Static Green
Bluetooth / 2.4 GHz Indicator	Bluetooth / 2.4 GHz	Reconnecting - Fast Blinking Paired - Light off Pairing - Slow Blinking
Caps Lock Indicator	Caps Lock	Enable Caps Lock - Static Red Disable Caps Lock - Light Off

K2 MAX WIRELESS MECHANICAL KEYBOARD OVERVIEW

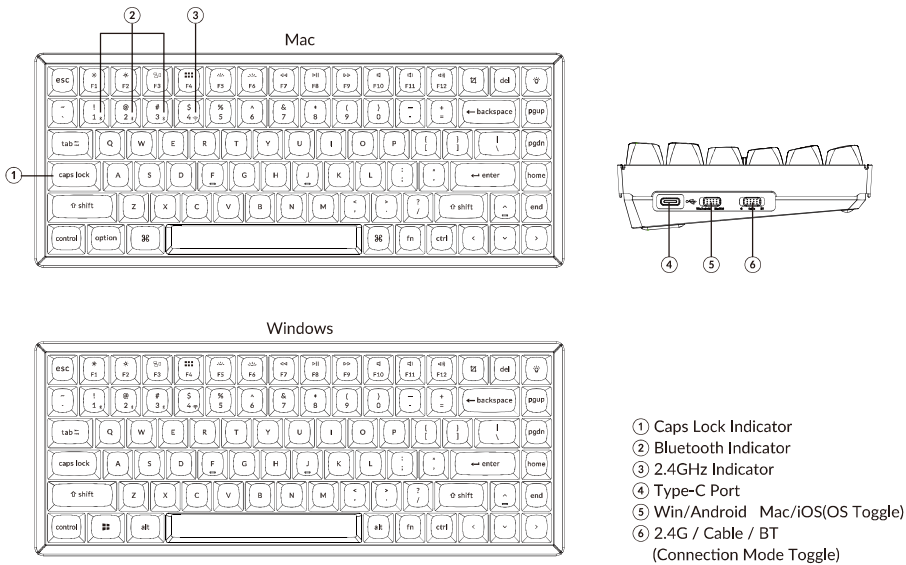


DEFAULT KEY LAYOUT:


LAYER 0: This layer will be activated when your keyboard's system toggle is switched to Mac.

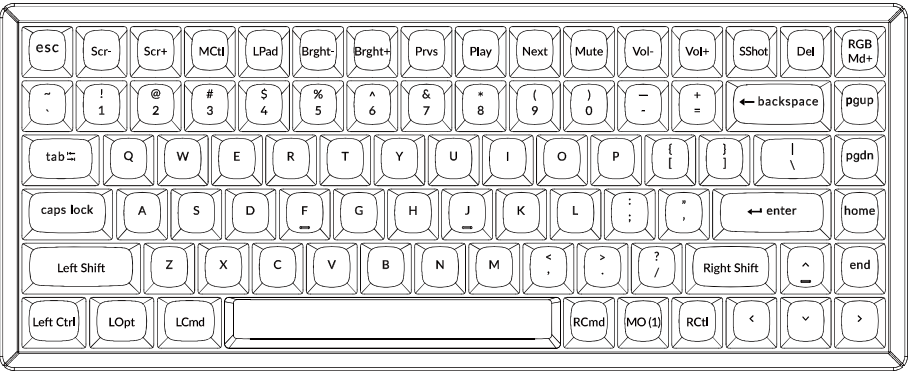

LAYER 1: This layer will be activated when your keyboard's system toggle is switched to Mac and press the fn/MO(1) key.

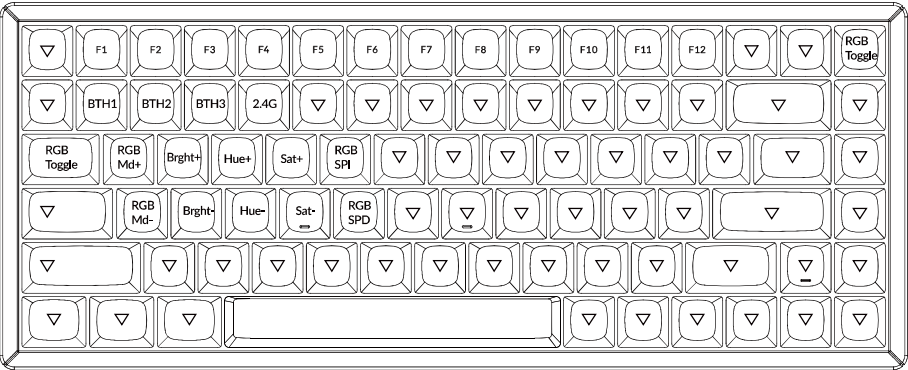


LAYER 2: This layer will be activated when your keyboard's system toggle is switched to Windows.

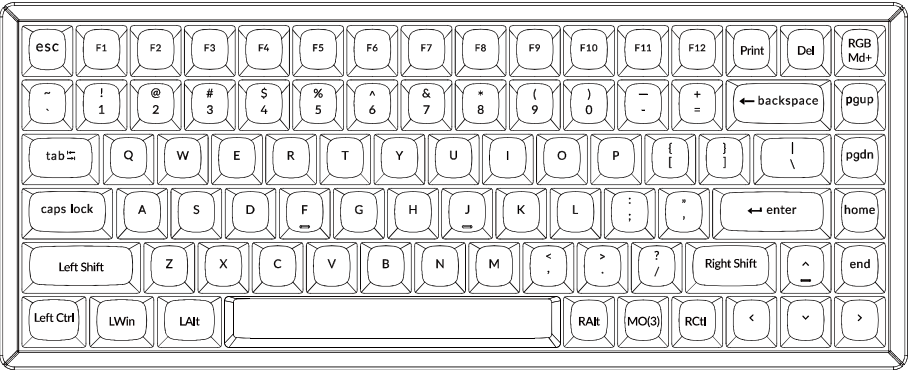

LWin = Left Windows LAlt = Left Alt RAlt = Right Alt RCtrl = Right Ctrl

LAYER 3: This layer will be activated when your keyboard's system toggle is switched to Windows and press the fn/MO(3) key.

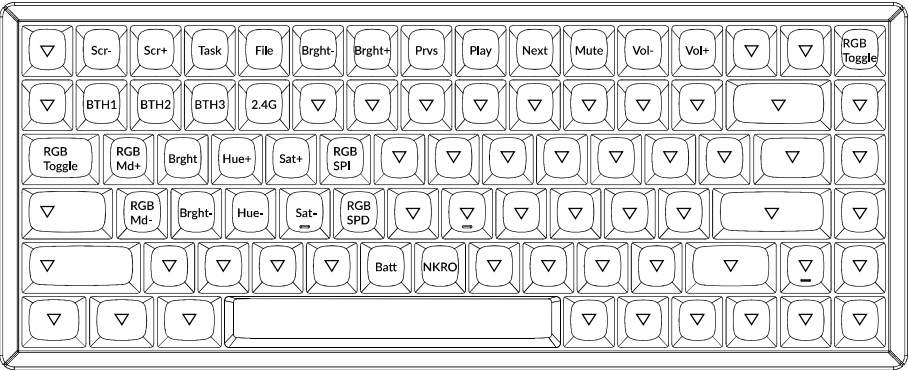

KEY DESCRIPTION

Key Description		Key Description		Key Description	
Scr-	Screen Brightness Decrease	RGBMd-	RGB Mode Previous	NKRO	N-key rollover
Scr+	Screen Brightness Increase	Hue+	Hue Increase	Task	Task View
Bright-	Backlight Decrease	Hue-	Hue Decrease	File	File Explorer
Bright+	Backlight Increase	RGB SPI	RGB Speed Increase	MCH	Mission Control
Prvs	Previous	RGB SPD	RGB Speed Decrease	LPad	LaunchPad
Play	Play/Pause	MO(1)	Layer 1 will be activated when holding this key		
Next	Next	MO(3)	Layer 3 will be activated when holding this key		
Mute	Mute	BTH1	Bluetooth Host 1		
Vol-	Volume Decrease	BTH2	Bluetooth Host 2		
Vol+	Volume Increase	BTH3	Bluetooth Host 3		
RGB Toggle	Turn Backlight on/off	2.4G	2.4GHz Host		
RGBMd+	RGB Mode Next	Batt	Battery life		

FUNCTION DESCRIPTION:

CHARGING

Plug the cable into a USB port and plug the other end into the keyboard port. Power Indicator:
A red light will stay on while charging; Fully charged in around 5 hours, a green battery indicator will appear.

*The K2 Max keyboard is compatible with all USB ports. Please use a 5V 1A adapter or USB 3.0 for the best performance. The K2 Max can be charged in 2.4GHz/Cable/Bluetooth mode.

**This product supports up to 5V charging voltage and 1A charging current. We are not responsible for any problems caused by improper charging.

2.4GHZ / CABLE / BLUETOOTH MODE (MODE TOGGLE)

2.4GHZ MODE

1. Connect the 2.4GHz receiver to your device's USB Port.
2. Switch the toggle to the 2.4GHz option. The keyboard will automatically connect to your device.

BLUETOOTH MODE

1. Switch the toggle to the Bluetooth option.
2. Backlighting will be turned on.
3. Hold "fn+1" key for 4 seconds to activate Bluetooth pairing (the Bluetooth indicator fast flashes for 3 minutes to detect pairing).

4. Search for the Bluetooth device "Keychron K2 Max" on your device and connect it (the Bluetooth indicator goes off after successful pairing).

Note: This keyboard supports pairing up to 3 devices simultaneously via key combination "fn" + "1" / "fn" + "2" / "fn" + "3".

**The Bluetooth indicator will continue to flash for 3 minutes.*

***Slow or failed connections may exist due to different Bluetooth versions, please make sure all the settings are correct.*

SWITCH BLUETOOTH DEVICES

Short press key combination "fn" + "1" / "fn" + "2" / "fn" + "3" to switch to other device.

RECONNECT:

1. Switch the keyboard to the Bluetooth option to activate the keyboard.
2. The Bluetooth indicator flashes for 3 seconds and automatically pairs with the last paired device.
3. If the Bluetooth indicator is off, press any button to enter the connection again.

* The keyboard must have been paired with the device to perform this function.

WIRED MODE

1. Switch the toggle to the Cable option .
2. Connect our cable with your PC and keyboard.
3. Backlighting will be turned on.

*Under Wired Mode, keyboard will not enter into Battery Saver Mode.

TURN OFF THE KEYBOARD

Switch the keyboard to the Cable option and unplug the power cable.

BACKLIGHT SETTING

- Short press key combination "fn" + "tab" to turn the backlight on/off.
- Short press key combination "fn" + "Q" or "fn" + "A" to switch between different types of lighting effects.

OS TOGGLE SWITCH

1 – MAC/iOS

Switch the toggle to Mac/iOS when the keyboard is connected to a Mac or iOS operating system.

2 – WINDOWS/ANDROID

Switch the toggle to Windows/Android when the keyboard is connected to a Windows or Android operating system.

**When using the Windows/Android mode,   keys are used for “Windows” and “Alt” functions.*

3 – INPUT METHOD SWITCH

For iOS:

Input method switch: Ctrl + Space

Caps Lock: Caps (Enable General>Keyboards>Hardware Keyboard>Caps Lock Language Switch)

For Android:

Input method switch: Shift + Space

NOTE: Functions of certain multimedia key may be disabled due to compatibility, versions, brands and drivers of Windows/Android OS. We also recommend not to switch OS frequently as it may impact keyboard operations.

TROUBLESHOOTING

If unable to pair keyboard to device, confirm that the device you're trying to pair with is Bluetooth-capable. If so, restart the device and try pairing it with the keyboard again.

Note: On a Windows computer, a new Bluetooth connection will sometimes require additional software updates—a process that may still be ongoing after a message appears indicating a successful completion. Wait at least 20 minutes after pairing to make sure all updates are completed before restarting the computer.

Confirm that the device is configured to accept Bluetooth connections (Windows) and supports an external keyboard (HID profile).

Go to Bluetooth Devices > Open Settings and select the following:

Allow Bluetooth devices to find this computer

Allow Bluetooth devices to connect to this computer

Alert me when a Bluetooth device wants to connect

My keyboard isn't working in Bluetooth mode.

For the computer/smartphone:

Go to your device Bluetooth settings>Select the keyboard and remove/delete/unpair it.

Then restart your device.

For the keyboard:

Turn the keyboard off and back on. Then reconnect it to your device.

My keyboard isn't working in 2.4 GHz mode.

Ensure the toggle is set to 2.4 GHz, remove the receiver from your device, and press "fn" + "4" for 4 seconds to force pair, then reinsert the receiver into the device, keeping the keyboard within 20 cm of the receiver for optimal pairing.

Wireless connection is interrupted even within 10 meters.

Check if the keyboard is resting on a metal surface that can interfere with the wireless signal.

Third-party input tools are not compatible with the keyboard.

Due to compatibility, versions, brands and drivers of Windows/Android OS, functions of third-party input tools may be affected while using the keyboard. Please make sure your operating system and drivers are up to date.

Certain multimedia keys or function keys do not work.

Functions of certain multimedia keys may be disabled due to compatibility, versions, brands, and drivers of devices.

*Multimedia keys:

Function keys:

F1 / F2 / F3 / F4 / F5 / F6 / F7 / F8 / F9 / F10 / F11 / F12

Safety Precaution:

Keep the product, accessories and packaging parts out of the reach of children to prevent any accidents and choking hazards.

Always keep the product dry to avoid corrosion.

Do not expose the product to extreme temperatures below -10°C(14°F) or above 50°C(122°F) to preserve the lifespan of the keyboard.

Keychron, Inc.

Dover, DE 19901, United States

Find us at:

<https://www.keychron.com>

Support@keychron.com

 @keychron

 @keychron

 @keychronMK

Designed by Keychron

Made in China



K2 Max无线机械键盘

完全组装版本



键盘
1x 已组装成品键盘

包含
1x 外壳
1x PCB
1x 铁质定位板
1x 吸音泡棉
1x IXPE垫
1x PET垫
1x EPDM泡棉
1x 底壳PET垫
1x 硅胶底垫
4套PCB卫星轴
1套键帽 (PBT材质-双色注塑)
1套机械轴体

线材
1x Type-A to Type-C 接口线材


接收器
1x Type-A 2.4GHz 接收器
1x 接收器延长器

工具
1x 拔轴键器
1x 十字螺丝刀
1x 内六角螺丝刀(仅限金属边框版本)*

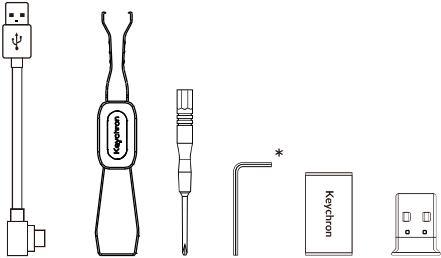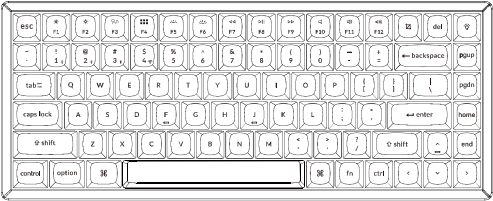

套件版本


- 键盘
- 1x 键盘本体 (不包含键帽、轴体)
- 包含
- 1x 外壳
- 1x PCB
- 1x 铁质定位板
- 1x 吸音泡棉
- 1x IXPE垫
- 1x PET垫
- 1x EPDM泡棉
- 1x 底壳PET垫
- 1x 硅胶底垫
- 4套PCB卫星轴

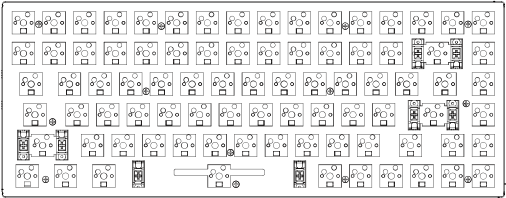

- 线材
- 1x Type-A to Type-C 接口线材


- 接收器
- 1x Type-A 2.4GHz 接收器
- 1x 接收器延长器

- 工具
- 1x 拔轴键器
- 1x 十字螺丝刀
- 1x 内六角螺丝刀(仅限金属边框版本)*

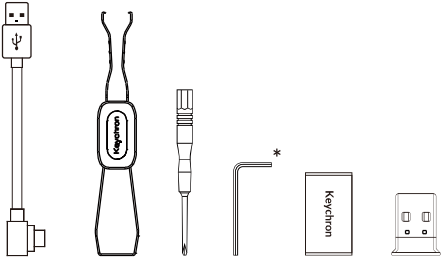

快速上手指南

如果你是Windows用户, 请在包装盒里找到如下的键帽, 用拔键器拔下键盘上的对应键帽并且更换。



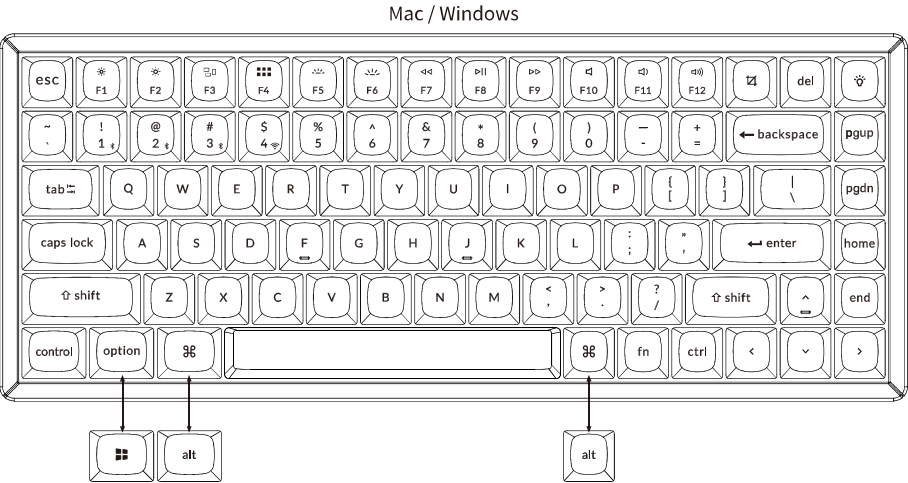


1 连接2.4GHz接收器

将2.4GHz接收器连接到设备USB端口。



把开关拨到2.4GHz模式

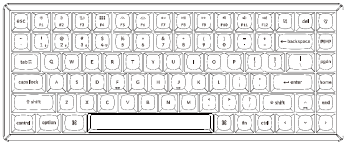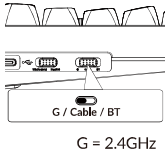


注意:为了获得最佳的无线体验,我们建议将2.4GHz接收器插入线材+赠送的接收器延长器,放置在书桌上靠近你的键盘,以降低延迟率和更多的干扰信号。


2 连接蓝牙



把开关拨到蓝牙模式

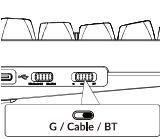

长按fn+1四秒使键盘进入配对模式, 键盘的配对名为: Keychron K2 Max。

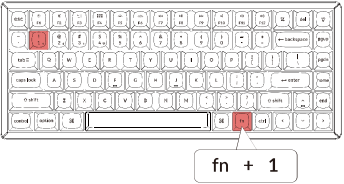


3 连接有线




4 系统切换

请确保键盘左上角的系统拨片切换到对应系统，
如果没有选择正确，
部分功能将无法使用。




5 更改键盘背光模式以及快速关闭/开启键盘背光

组合fn+Q键,更改键盘背光模式。 组合fn+tab键,可快速关闭/开启键盘背光。

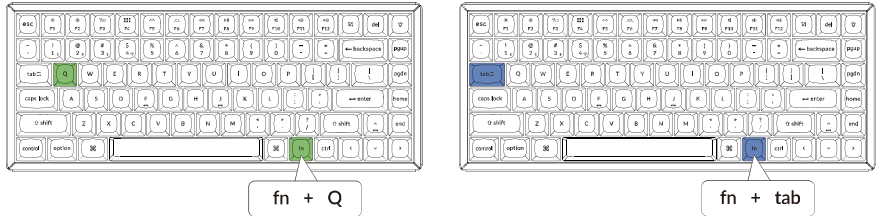


6 调整键盘背光亮度的

组合fn+W键,提高键盘背光亮度的。 组合fn+S键,减少键盘背光亮度的。

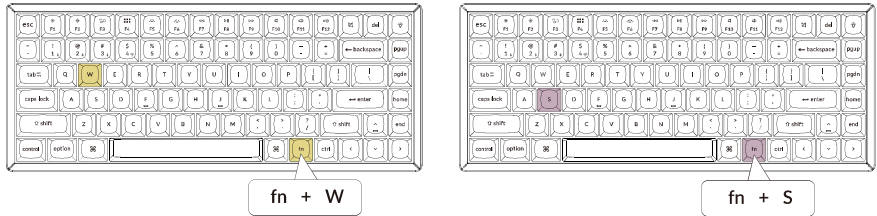


7 调整背光速度

组合fn+T键,增加光效速度。

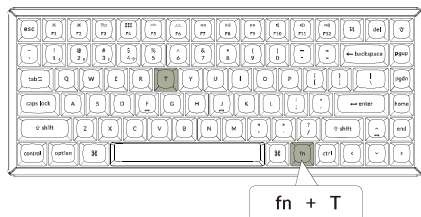

组合fn+G键,降低光效速度。

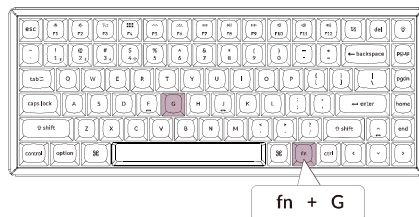

8 关于Keychron Launcher App

请访问 launcher.keychron.com 使用在线 Launcher App。
该软件可以映射按键、创建宏命令以及刷新固件。
如果 Launcher App不能识别你的键盘,请联系我们以获得技术支持。



*在线Launcher App只能在最新版本的Chrome, Edge和Opera浏览器中运行。


*Launcher App仅在键盘通过有线连接到计算机时有效。

9 关于键盘键层说明


键盘有四层按键设置。
层0和层1是用于Mac系统。
层2和层3是用于Windows系统。

如果您的系统拨片切换到Mac档位，
层0将被激活。

如果您的系统切换到Windows，
那么层2将被激活。
如果您在Windows系统模式下使用，
请对层2进行更改，而不是层0。
否则无法进行按键映射操作。



10 恢复出厂模式&更新固件

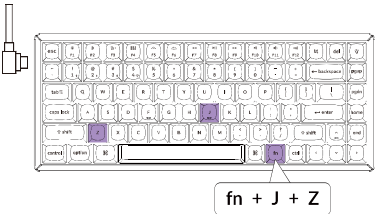

如果键盘出现了故障, 不知道怎么办?

恢复出厂设置

- 1. 打开键盘 (任意模式均可)。
- 2. 按住 fn + J + Z (持续 4 秒)。键盘背光灯会呈红色快速闪烁 3 秒，表示键盘已重置。

刷新键盘固件

- 1. 访问 launcher.keychron.com 打开在线 Launcher web app。
- 2. 确保键盘处于Cable或者有线模式，并插入电源线。
- 3. 在Launcher上找到“固件更新”选项，并将键盘与其连接。
- 4. 按照Launcher提示，完成固件更新。



*在 keychron.com 上搜索关键字“Firmware”可以找到步骤指南。

11 保修


由于K2 MAX客制化键盘是可高度定制且易于组装的，所以键盘的任何一个部件出了问题，我们只会更换键盘有问题的部件而不是整个键盘。



K2 MAX键盘概述

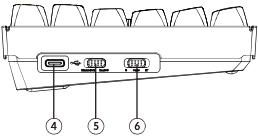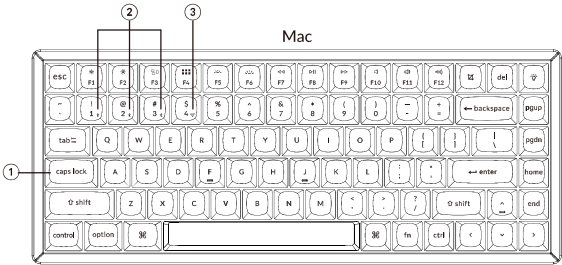

- ① 大写锁定指示灯
- ② 蓝牙指示灯
- ③ 2.4GHz指示灯
- ④ Type-C充电口
- ⑤ Win/Android Mac/iOS (OS切换开关)
- ⑥ Bluetooth/Cable/2.4G (连接模式切换开关)

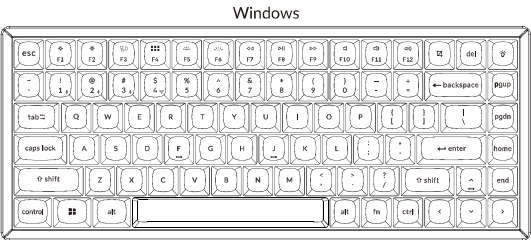

K2 MAX键盘规格

按键: 84键
轴: 机械轴
电池: 4000mAh
充电时间: 5小时
充电端口: Type-C
模式: 蓝牙 / 有线 / 2.4G
蓝牙工作距离: 最长10米 (开放空间)
蓝牙设备名称: Keychron K2 Max


功能说明

LED状态显示如下:


功能	LED位置	状态
充电	电源指示灯	低电量—红灯闪烁 充电—红灯常亮 满电—绿灯
蓝牙 / 2.4GHz	蓝牙 / 2.4GHz通道指示灯	快闪—切换 熄灭—连接成功 慢闪—配对
大小写	大小写状态指示灯	红灯—大写 熄灭—小写

按键布局

层0:当您的系统拨片切到Mac档位的时候,层0将被激活使用。

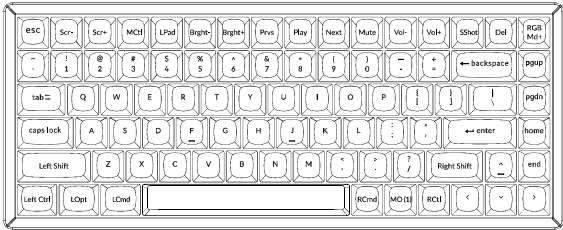

层1:当您的系统拨片切到Mac档位并组合fn/MO(1)键的时候,层1将被激活使用。

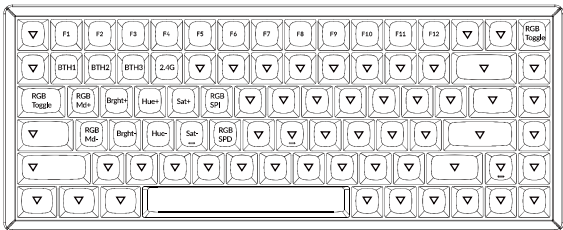

A diagram of a standard 104-key computer keyboard layout. The keyboard is shown from a top-down perspective, with keys arranged in four rows. The top row includes function keys (ESC, F1-F12), a numeric keypad (Pwr, Del, RCB, Mfr), and a numeric keypad (0-9, *, /, =, >, <, <backspace>). The second row contains letters Q-W-X, letters A-S-D-F-G-H-J-K-L-; (semicolon), and a numeric keypad (pgdn, /, \, ~). The third row contains letters Z-X-C-V-B-N-M-; (comma), a numeric keypad (pgdn, /, \, ~), and a numeric keypad (end, ~). The bottom row includes a numeric keypad (Left Ctrl, LWin, LAlt, spacebar, RAlt, RCtrl, MMod, RCB, < >). The keyboard is labeled '104-key' in the bottom right corner.

[illegible]

K2 MAX 客制化键盘多媒体按键说明

按键说明		按键说明		按键说明	
Scr-	屏幕亮度-	RGBMd-	上一个RGB灯光模式	NKRO	全键无冲
Scr+	屏幕亮度+	Hue+	下一个灯光颜色	Task	任务视图
Bright-	键盘背光亮度-	Hue-	上一个灯光颜色	File	文件管理器
Bright+	键盘背光亮度+	RGB SPI	RGB灯光速度+	MCtl	调度中心
Prvs	上一曲	RGB SPD	RGB灯光速度-	LPad	启动台
Play	播放/暂停	MO(1)	按住MO(1),层1将被激活		
Next	下一曲	MO(3)	按住MO(3),层3将被激活		
Mute	静音	BTH1	蓝牙连接设备 1		
Vol-	音量-	BTH2	蓝牙连接设备 2		
Vol+	音量+	BTH3	蓝牙连接设备 3		
RGB Toggle	关闭/开启键盘背光	2.4G	2.4G连接		
RGBMd+	下一个RGB灯光模式	Batt	电池电量		

充电

将电线插入USB端口，将另一端口插入键盘的端口。

充电指示灯：电池电量低于15%，红色电池指示灯慢闪；充电时，红色电池指示灯长亮；在约5小时内完全充电，指示灯绿色长亮。

*Keychron K2 Max键盘与所有USB端口兼容。要获得最佳信号和最快充电时间，建议采用USB3.0端口或5V-1A电源适配器。

*Keychron K2 Max可在2.4GHz / 有线 / 蓝牙模式下充电。

*有线模式下，充电指示灯不会熄灭。

*本产品最高支持5V充电电压，和1A充电电流。因不当充电而产生的问题，我们概不负责。

背光灯

-短按组合键“fn+tab”可关闭/开启键盘背光。

-短按组合键“fn+Q”/“fn+A”可切换背光效果。

2.4GHz / 蓝牙 / 有线模式

2.4GHz模式

1. 将键盘2.4GHz接收器连接至设备端口的USB接口

2. 将键盘“模式切换”拨动到“G”位置 (2.4GHz模式)，键盘将自动连接到您的设备。

蓝牙模式

1. 将键盘“模式切换”拨动到 BT 位置。

2. 键盘背光灯将打开。

3. 长按“fn+1”键4秒激活蓝牙配对 (蓝牙指示灯闪烁3分钟)。

4. 在你的装置上搜索蓝牙装置“Keychron K2 Max”并连接它 (配对成功后蓝牙指示灯熄灭)。

注意:此键盘支持通过组合键“fn+1”/“fn+2”/“fn+3”依次配对最多3台设备。

*因蓝牙版本较多等原因，初次连接可能出现连接缓慢或连接失败等问题，请耐心等待设备设置是否正确。

切换至蓝牙装置

短按组合键 “fn+1” / “fn+2” / “fn+3” 切换到其他装置。

*切换过程可能会因切换频繁或切换速度过快，导致延迟，此时请耐心等待或重新切换。

回连

- 1. 将键盘切换到Bluetooth位置启动键盘。
 - 2. 蓝牙指示灯快闪3秒，自动配对上一次配对的设备。
 - 3. 如蓝牙指示灯熄灭，可按任何按键再次进入回连状态。
- * 键盘必须曾经配对该装置才能实现此功能。

有线模式

- 1. 将键盘“模式切换” 拨动到 Cable 位置（没插USB线的时候键盘无任何反应）。
 - 2. 使用本产品USB Type-C线连接电脑即可使用。
 - 3. 键盘背光灯将打开。
- * 在有线模式下，键盘不会自动进入省电模式。

关闭键盘

将模式开关拨动到Cable，拔掉电源线，此时键盘关闭所有模式。

系统切换

1 — MacOS / iOS

连接到Mac或iOS操作系统时，请将键盘上方系统开关拨至Mac/iOS。

2 — WINDOWS / 安卓

当键盘连接到 Windows 或 Android 操作系统时，请将键盘上方系统开关拨至Win/Android。

3 — 输入法切换

对于iOS:

输入法切换: Ctrl + Space

大写锁定: Caps (启用常规>键盘>硬件键盘>大写锁定拉丁开关)

对于安卓：
输入法切换: Shift + Space

注: 由于Windows / 安卓OS的兼容性、版本、品牌和驱动程序, 某些多媒体键的功能可能不能被使用。我们还建议不要频繁切换操作系统, 因为它可能会影响键盘的操作。

疑难排解

我无法将键盘与我的装置配对。

答: 确认您要配对的装置可使用蓝牙。

重新启动装置并尝试再次与键盘配对。

注意: 在Windows计算机上, 新的蓝牙连接有时需要额外的软件更新 - 在出现表示成功完成的消息后, 该过程可能仍在进行中。配对后至少等待20分钟, 以确保在重新启动计算机之前完成所有更新。

确认装置配置可接受蓝牙连接 (Windows) 并支持外部键盘 (HID配置文件)。

转到蓝牙装置>打开设置, 然后选择以下复选框:

允许蓝牙装置找到这台电脑

允许蓝牙装置连接到这台电脑

当蓝牙装置想要连接时提醒我

我的键盘无法使用2.4G。

请确保开关已切换至2.4GHz, 从设备中拔出接收器, 按住“fn” + “4”键4秒以强制配对, 然后将接收器重新插入设备, 确保在配对过程中键盘与接收器的距离不超过20厘米以获得最佳配对效果。

我的键盘无法使用蓝牙。

答: 请打开您的电脑/智能手机上的蓝牙设置>选择键盘并删除此设备/取消配对, 然后重启您的设备; 关闭并重新打开键盘, 然后重新连接到您的装置。

蓝牙连接或在10米内受干扰。

答: 检查键盘是否放在可能干扰蓝牙信号的金属表面上。

第三方输入工具与键盘不兼容

答：由于Windows / Android 系统的兼容性、版本、品牌和驱动程序，第三方输入工具在使用键盘时或被影响。请确保你的作业系统和驱动程序为最新版本。

某些多媒体键或功能键在设备上不起作用。

答：由于设备的兼容性，系统版本，驱动程序等原因，某些多媒体键或者功能键可能无法使用。

*多媒体键：

⌂ / ✱ / 🗄 / 🖨 / 📄 / 📁 / 📂 / 📅 / 📆 / 📇 / 📈 / 📉 / 📊 / 📋 / 📌 / 📍 / 📎 / 📏 / 📐 / 📑 / 📒 / 📓 / 📔 / 📕 / 📖 / 📗 / 📙 / 📚 / 📛 / 📜 / 📝 / 📞 / 📟 / 📠 / 📡 / 📢 / 📣 / 📤 / 📥 / 📦 / 📧 / 📨 / 📩 / 📪 / 📫 / 📬 / 📭 / 📮 / 📯 / 📰 / 📱 / 📲 / 📳 / 📴 / 📵 / 📶 / 📷 / 📸 / 📹 / 📺 / 📻 / 📼 / 📽 / 📾 / 📿 / 📠 / 📡 / 📢 / 📣 / 📤 / 📥 / 📦 / 📧 / 📨 / 📩 / 📪 / 📫 / 📬 / 📭 / 📮 / 📯 / 📰 / 📱 / 📲 / 📳 / 📴 / 📵 / 📶 / 📷 / 📸 / 📹 / 📺 / 📻 / 📼 / 📽 / 📾 / 📿

功能键：

F1 / F2 / F3 / F4 / F5 / F6 / F7 / F8 / F9 / F10 / F11 / F12

注意事项：

请勿将本产品，其配件和包装部件放在儿童接触到的地方，以防发生意外引致窒息。
请保持产品干燥，以免腐蚀。
请勿将产品暴露在低于-10°C (14°F) 或高于50°C (122°F) 的极端温度下，以维持键盘或电池的使用寿命。

Keychron, Inc.
Dover, DE 19901, United States
<https://www.keychron.com>
通过以下方式与我们联系
Support@keychron.com
Facebook @keychron
Instagram @keychron
Twitter @keychronMK
Keychron设计
中国制造

中国区总代：渴创技术（深圳）有限公司
执行标准：GB/T 14081-2010
售后热线：400-0766268
地 址：深圳市龙岗区坂田街道大发埔社区
大发路24号文坑工业区2栋201