

## Line Interactive UPS

PowerWalker VI 450 LCD  
PowerWalker VI 650 LCD  
PowerWalker VI 850 LCD  
PowerWalker VI 1000 LCD  
PowerWalker VI 1500 LCD  
PowerWalker VI 2000 LCD



## Quick Start Guide

EN/DE/FR/PL/CZ

## IMPORTANT SAFETY INSTRUCTIONS

EN

**SAVE THESE INSTRUCTIONS** – This manual contains important instructions for models PowerWalker VI 450/650/850/1000/1500/2000 LCD that should be followed during installation and maintenance of the UPS and batteries.

- This product is specially designed for PCs and it is not recommended for use in any life-supporting system and other specific important equipment.
- This equipment can be operated by any individual with no previous training.
- Do not plug household appliances such as hair dryers to UPS receptacles.
- This unit intended for installation in a controlled environment (temperature controlled, indoor area free of conductive contaminants). Avoid installing the UPS in locations where there is standing or running water, or excessive humidity.
- Risk of electric shock, do not remove cover. No user serviceable parts inside. Refer servicing to qualified service personnel.
- The utility power outlet shall be near the equipment and easily accessible. To isolate UPS from AC input, remove the plug from the utility power outlet.
- If UPS is to be stored for a long time, it is recommended to recharge the batteries (by connecting the utility power to UPS, switch “ON”), once a month for 24 hours to avoid a full battery discharge.
- Please do not use the UPS in excess of the rated load capacity.
- The UPS contains one/two large-capacity batteries. So the shell shall not be opened, otherwise such dangers as electric shock will be caused. If any internal overhaul or replacement of the battery is required, please contact the distributor.
- The internal short circuiting of the UPS will lead to dangers such as electric shock or fire, therefore, no water containers (such as a water glass) shall be placed on the top of the UPS so as to avoid such dangers as electric shock.
- Do not dispose of battery or batteries in a fire. The battery may explode.
- Do not open or mutilate the battery or batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic.
- Icon  $\Phi$  on the rating label stands for phase symbol.
- A battery can present a risk of electrical shock and high short circuit current. The following precautions should be observed when working on batteries :
- Remove watches, rings, or other metal objects from the hand.
- Use tools with insulated handles.

- Servicing of batteries should be performed or supervised by personnel knowledgeable of batteries and the required precautions. Keep unauthorized personnel away from batteries.
- When replacing batteries, replace with the same type and number of the sealed lead-acid batteries.
- The maximum ambient temperature rating is 40°C.
- This pluggable type A equipment with battery already installed by the supplier is operator installable and may be operated by laymen.
- During the installation of this equipment it should be assured that the sum of the leakage currents of the UPS and the connected loads does not exceed 3.5mA.
- Attention, hazardous through electric shock. Also with disconnection of this unit from the mains, hazardous voltage still may be accessible through supply from battery. The battery supply should be therefore disconnected in the plus and minus pole of the battery when maintenance or service work inside the UPS is necessary.
- The mains socket outlet that supplies the UPS shall be installed near the UPS and shall be easily accessible.
- In case smoke is found coming out from the device, please cut off the power supply quickly and contact the distributor.
- Do not keep or use this product in any of the following environments:
  - Any area with combustible gas, corrosive substance or heavy dust.
  - Any area with extraordinarily high or low temperature (above 40°C or below 0°C) and humidity of more than 90%.
  - Any area exposed to direct sunshine or near any heating apparatus.
  - Any area with serious vibrations.
  - Outdoor.
- In the event that there is fire occurring in the vicinity, please use dry-power extinguishers. The use of liquid extinguishers may give rise to the danger of electric shock.

**This product complies with the safety and environmental regulations in EU.**

If the time arises to throw away your product, please recycle all the components possible. Batteries and rechargeable batteries are not to be disposed in your domestic waste! Please recycle them at your local recycling point. Together we can help to protect the environment.



## 1. Introduction

EN

**PowerWalker VI series** is an intelligent and compact line interactive UPS (Uninterruptible Power Supply) which is designed to protect your personal computer or sensitive electronic equipments from all forms of power interference, including complete power failures. It is equipped with many features that allow any attached equipment to operate longer and more reliability.


## 2. Green concept design

PowerWalker VI 450/650/850/1000/1500/2000 LCD series adopt switching mode charging which creates a variety of benefits:

- Increases charging efficiency to more than 80%, more energy saving than traditional UPS
- The battery requires only 4 hours to be 90% charged, reducing 50% of charging time
- Reduces heat generation during battery charging, providing a longer battery life
- Increases reliability and helps to save money

## 3. Package Contents


You should have received the following items inside of package:




UPS Unit



USB Cable



IEC Cable  
(for VI 1000/1500/2000  
LCD only)



AC Input Power Cord  
(for VI 1500/2000 LCD  
only)



Software CD




Quick Start Guide




Service Guide

## 4. Product Overview

### Front Panel:

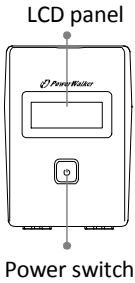


### LCD Panel:

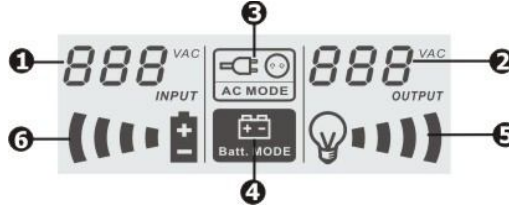

- ❶ Input voltage
- ❷ Output voltage
- ❸ AC mode indicator
- ❹ Battery mode indicator
- ❺ Load level indicator, flashing indicates overload
- ❻ Battery capacity indicator, flashing indicates low battery


### Back Panel:

#### VI 450/650/850 LCD

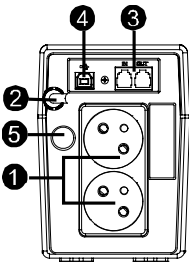


- ❶ Output receptacles
- ❷ AC input
- ❸ Modem or phone surge protection
- ❹ USB port
- ❺ Breaker

#### VI 1000 LCD

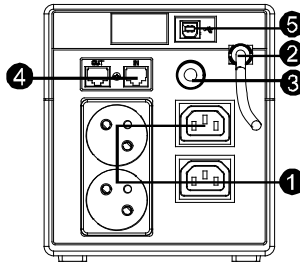

- ❶ Output receptacles
- ❷ AC input
- ❸ Circuit breaker
- ❹ Modem or phone surge protection
- ❺ USB port

#### VI 1500/2000 LCD

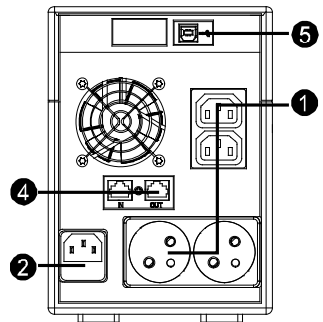

- ❶ Output receptacles
- ❷ AC input
- ❸ Modem or phone surge protection
- ❹ USB port


## 4. Installation and Initial Startup



Before installation, please inspect the unit. Be sure that nothing is damaged.

### I: Placement & Storage Conditions

Install the UPS in a protected area that is free of excessive dust and has adequate air flow. Please place the UPS away from other units at least 20 cm to avoid interference. Do NOT operate the UPS where the temperature exceeds 0-40° C and the humidity is over 0-90 % RH.

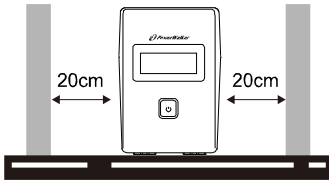

### II: Connect to Utility and Charge

Plug in the AC input cord to the wall outlet. For the best results, we suggest charging the battery at least 4 hours before initial use. The unit charges its battery while connecting to the utility.

### III: Connect the Loads

Plug in the loads to output receptacles on the rear panel of the UPS. Simply turn on the power switch of UPS unit, and devices connected to the UPS will be protected by UPS unit.



Do not attach a power strip or surge suppressor to the UPS.

### IV: Connect Modem or Phone for Surge Protection

Connect a single modem or phone line into surge-protected "IN" outlet on the back panel of the UPS unit. Connect from "OUT" outlet to the computer with another phone line cable.

### V: Connect USB Cable

To monitor the UPS status, such as unattended UPS shutdown and start-up, by using bundled software, please connect the UPS and PC with USB cable included.



**NEVER** connect a **laser printer** or **scanner** to the UPS unit, **because in-rush current generated by motor's devices** may cause the damage of the unit.



## VI: Turn On/Off the Unit

Turn on the UPS unit by pressing the power switch. Turn off the UPS unit by pressing again the power switch.

## 6. Audible alarm from the UPS

- When UPS switches from AC mode to Battery Mode to back up power supply: sounding every 10 seconds
- When battery is low: sounding every second
- When UPS is overloaded: sounding every 0.5 second
- When battery is faulty: sounding every 2 seconds
- Other fault: Continuous sounding

## 7. Software Installation on your PC

- Use the bundled CD and follow the on-screen instructions to install the software ViewPower.
- After the software is successfully installed, the communication with UPS has been established and an orange icon will appear in the system tray.



- Double-click the icon to use the monitor (as above).
- You can schedule UPS shutdown/start-up and monitor UPS status through PC.
- Detail instructions please refer to the e-manual in the software.

## 8. Specifications

EN

Model	VI 450 LCD	VI 650 LCD	VI 850 LCD
<b>CAPACITY</b>	450 VA / 240 W	650 VA / 360 W	850 VA / 480 W
<b>INPUT</b>			
Voltage	220~240 VAC		
Voltage Range	162~290 VAC		
Frequency Range	50/60Hz±1Hz		
<b>OUTPUT</b>			
Voltage Regulation	+/-10%		
Transfer Time	Typical 2-6 ms, 10 ms max.		
Waveform	Simulated Sine Wave		
Protection	Short circuit and overload protection		
<b>BATTERY</b>			
Type & Number	12V / 4.5Ah x 1	12V/ 7Ah x 1	12V/ 9Ah x 1
Charging Time	4-6 hours recover to 90% capacity		
Protection	Discharge and overcharge protection		
Backup Time (est. 120W)	5 min	10 min	15 min
<b>PHYSICAL</b>			
LCD Indicator	Input/output voltage, AC mode, Load level, Battery capacity		
Dimension (DxWxH)	287mm x 100mm x 142mm		
<b>ENVIRONMENT</b>			
Humidity	0-90 % RH @ 0-40° C (non-condensing)		
Noise Level	Less than 40 dB		

Model	VI 1000 LCD	VI 1500 LCD	VI 2000 LCD
<b>CAPACITY</b>	1000 VA / 600 W	1500 VA / 900 W	2000 VA / 1200 W
<b>INPUT</b>			
Voltage	220/230/240 VAC		
Voltage Range	162~290 VAC		
Frequency Range	50/60 Hz (Auto sensing)		
<b>OUTPUT</b>			
Voltage Regulation	+/-10%		
Frequency Range	50 or 60 Hz +/-1 Hz		
Transfer Time	Typical 2-6 ms, 10 ms max.		
Waveform	Simulated Sine Wave		
<b>BATTERY</b>			
Type & Number	12V / 7Ah x 2	12V / 9Ah x 2	12V / 9Ah x 2
Charging Time	4-6 hours recover to 90% capacity		
Protection	Overload, discharge and overcharge protection		
Backup Time (est. 240W)	11 min	18 min	20 min
<b>PHYSICAL</b>			
LCD Indicator	Input/output voltage, AC mode, Load level, Battery capacity		
Dimension (DxWxH)	350x146x160 mm	397mm x 146mm x 205 mm	
<b>ENVIRONMENT</b>			
Humidity	0-90 % RH @ 0-40° C (non-condensing)		
Noise Level	Less than 40 dB		